

12-42 Series



		40						1
		12	S	4	2	XX	-	XX
								!
Product Cla	assification							
12 = Ergo Handle			•					
Trottle Type	е							
S = L	ocking Lever							
Motor Size								
4 = 1	.7 hp							
Handle Sty	le							
2 = 8	Straight					_		
Speed Opti	ions (RPM)							
23 =	5,600							
24 =	7,000							
25 =	8,000							
Termination	n Code							
04 - 0	Porta Bag (Vacuu	ım haa an te	2/4" A	rhor				

01 = Porta-Bag (Vacuum bag on tool), 3/4" Arbor

02 = Saw with Floor Bag

03 = Saw (only), Vacuum type with Adapter

For additional product information visit our website at:

https://dotcotool.com/product-category/dotco-air-tools/dotco-specialty-tools/dotco-saws/dotco-12-42-series-saws/

SAFETY FIRST!

ALWAYS COMPLY WITH:

- General Industry Safety & Health Regulations, Part 1910, OSHA 2206, available from: Sup't of Documents; Government Printing Office; Washington DC 20402
- Safety Code for Portable Air Tools, ANSI B186.1 available from: American National Standards Institute, Inc.; 1430 Broadway; New York, NY 10018
- State and Local regulations.

Portions of the above codes and regulations are listed below for quick reference.

THESE EXCERPTS ARE NOT INTENDED TO BE ALL INCLUSIVE - STUDY AND COMPLY WITH ALL REGULATIONS!

WARNING FAILURE TO COMPLY WITH ALL SAFETY REGULATIONS MAY RESULT IN SERIOUS INJURY.

- 1.TOOL INTENT Tools shall be used only for purposes intended in their design (refer to product catalog).
- 2.AIR SUPPLY Test and operate tools at 90 PSIG maximum unless tool is marked otherwise. Use recommended airline filters—regulators—lubricators.
- UNUSUAL SOUND or VIBRATION If tool vibrates or produces an unusual sound, repair immediately for correction.
- 4.OPERATOR PROTECTIVE EQUIPMENT Wear goggles or face shield at all times tool is in operation. Other protective clothing shall be worn, if necessary. SEE REGULATIONS.
- 5.SAFETY MAINTENANCE PROGRAM Employ a safety program to provide inspection and maintenance of all phases of tool operation and air supply equipment in accordance with "Safety Code for Portable Air Tools."

Safe Work Practices Symbol

WARNING The signal word "Warning" identifies all notes on safe work practices in this operating instruction, alerting to hazards for life and health of people. Observe these notes and proceed with special care in the cases described. Pass all safety instructions on to other operators. In addition to the safety instructions in this operating instruction, the general local safety and accident prevention rules must be observed.

Important Notes

CAUTION The signal word "caution!" identifies all portions of this operating instruction meriting special attention to ensure that guidelines, rules, hints and the correct work procedures are observed; and, to prevent damage to and destruction of the machine and/or parts.

(*) Indicates recommended spare part (or set) for every five (5) tools. Small, low cost or easily lost parts should be stocked as 3-4 per 10 tools.



WARNING Disconnect the air supply hose before servicing the tool.

OPERATION

All 12S42 models covered by this parts list...

These models are lever operated (with latch off) horizontal type motors with angle head. The operator actuates and releases the lever, which starts and stops the air motor. When the motor starts, the saw blade is turning at the rated speed (5600, 7000 or 8000 RPM).

WARNING A blade guard covers the blade. Be sure the guard is functioning properly and that the guard's spring keeps the blade covered except when actually cutting.

Replacement blades ...

CAUTION Be sure to install blades with teeth turned for correct rotation; refer to the direction arrow on the saw guard.


LUBRICATION

Lubricate the motor with an air line lubricator, using a light air tool oil. Adjust the lubricator to dispense one drop per cycle or three drops per minute. This oil is available in one (1) quart (540397) or one (1) gallon (533485) quantities. A high film strength oil (536333) is also available; this oil cannot be used in Atomist type lubricators, use only with Economist or serv-oil type lubricators.

Thoroughly grease bevel pinion and bevel gear (angle head) with Cooper Power Tools grease every 100,000 cycles. Whenever the tool is disassembled, pack the


gearing with approximately 1/4 ounce of grease.

GAUTION Do not use substitutes for oil and grease. This could result in damage to the tool.

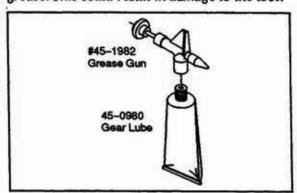


DOTCO®

Models 12–42 Series Vacuum Saws

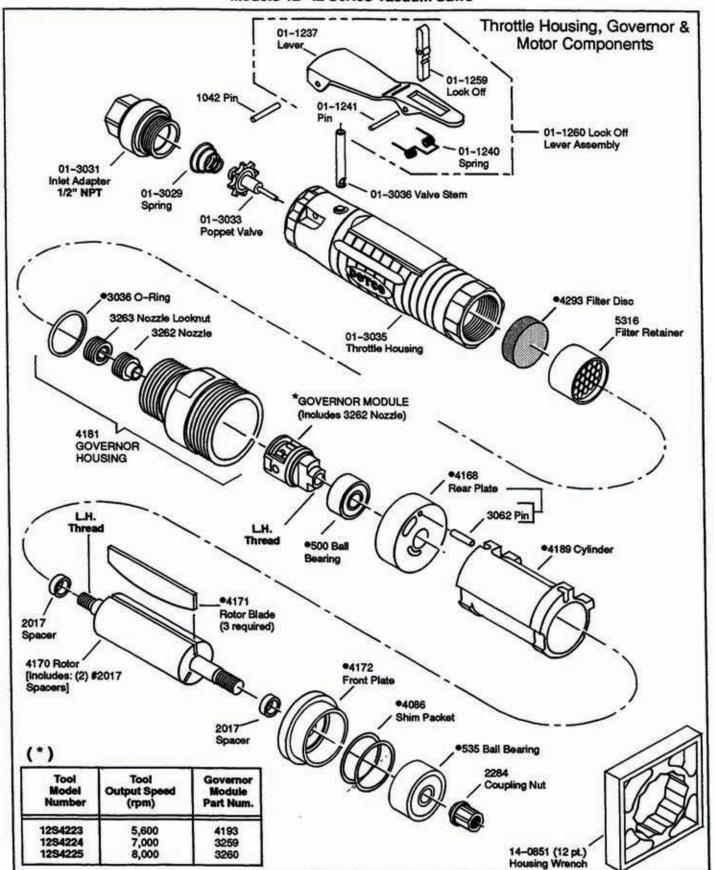


DOTCO®

Models 12–42 Series Vacuum Saws

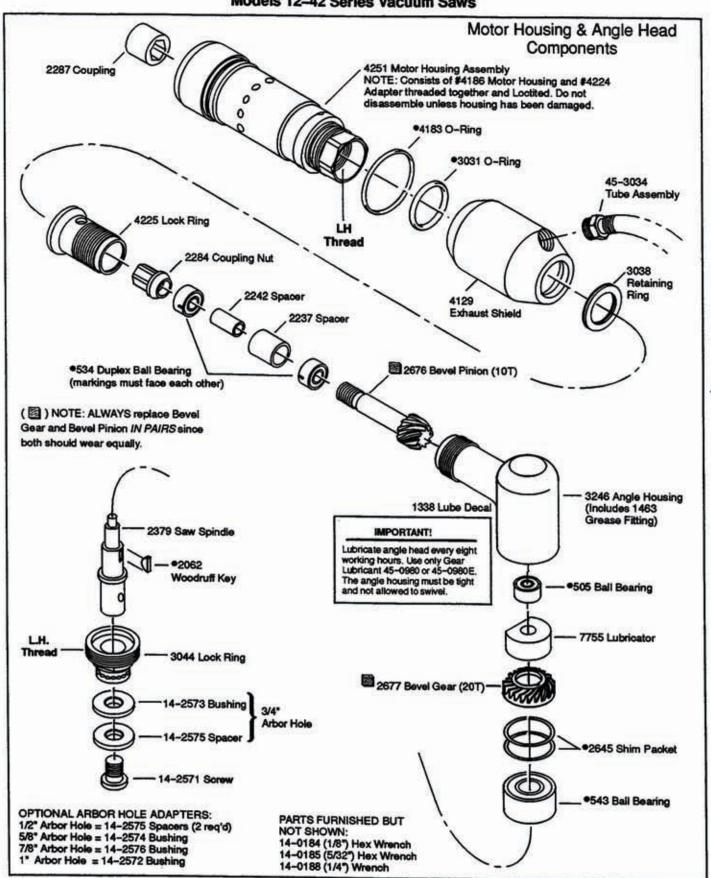

DOTCO®

Models 12–42 Series Vacuum Saws

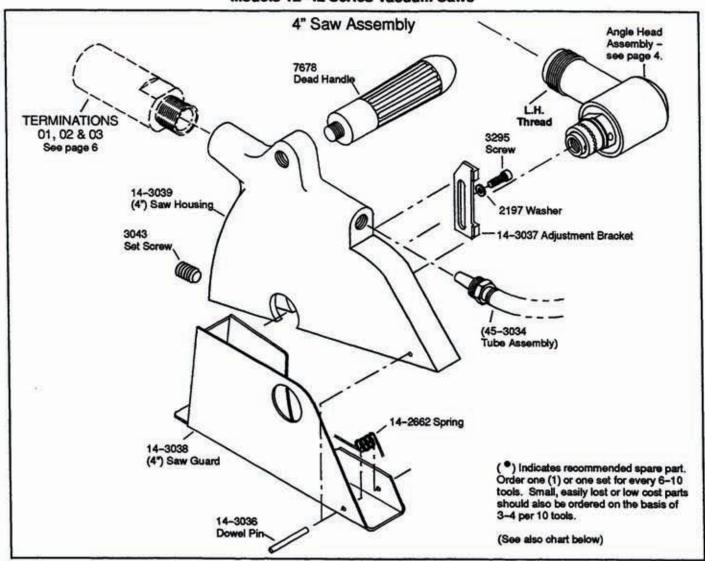

RECOMMENDED SPARE PARTS LIST


These parts are suggested as a recommended inventory of spare parts. Where parts are small, low cost, or easily lost, then we recommend stocking 3 to 4 for every 10 tools. Other larger, lower wear or more expensive parts should be maintained as one (or one set) for every six to ten tools.

Part		Qty	Recommended Spare Pts		
Number	Description	Per Tool	Per Tool	Per 10 Tools	
500	Ball Bearing	1	1	2	
505	Ball Bearing	1	1	2	
534	Duplex Ball Bearing	1	1	2	
535	Ball Bearing	1	1	2	
543	Ball Bearing	1	1	2	
2062	Woodruff Key	1	2-3	3-4	
2645	Shirn Packet	1	1	2	
4086	Shim Packet	1	1	2	
3031	O-Ring	1	2-3	3-4	

Part	Description	Qty	Recommended Spare Pts		
Number	Description	Tool	Per Tool		
3036	O-Ring	1	2-3	3-4	
4168	Rear Plate	1	0	2	
4171	Rotor Blade	3	3	15	
4172	Front Plate	1	0	2	
4183	O-Ring	1	2-3	3-4	
4189	Cylinder	1	0	2	
4293	Filter Disc	1	1	2	

DOTCO®

Models 12–42 Series ERGO Vacuum Saws
TERMINATIONS

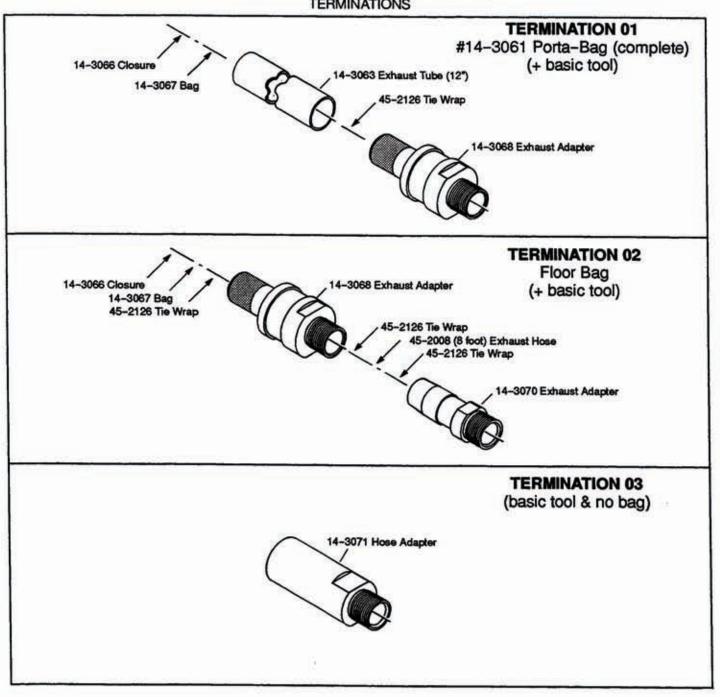

Sales & Service Centers

Note: All locations may not service all products. Please contact the nearest Sales & Service Center for the appropriate facility to handle your service requirements.

Dallas, TX **Apex Tool Group Sales & Service Center** 1470 Post & Paddock Grand Prairie, TX 75050 Tel: 972-641-9563

Fax: 972-641-9674

Los Angeles, CA
Apex Tool Group
Sales & Service Center
15503 Blackburn Avenue
Norwalk, CA 90650
Tel: 562-623-4457

Fax: 562-802-1718

Germany
Cooper Power Tools
GmbH & Co. OHG
a company of
Apex Tool Group, LLC
Industriestraße 1
73463 Westhausen
Germany
Tel: +49 (0) 73 63 81 0
Fax: +49 (0) 73 63 81 222

Mexico
Cooper Tools
de México S.A. de C.V.
a company of
Apex Tool Group, LLC
Vialidad El Pueblito #103
Parque Industrial Querétaro
Querétaro, QRO 76220
Mexico

Tel: +52 (442) 211-3800 Fax: +52 (442) 103-0443 Detroit, MI
Apex Tool Group
Sales & Service Center
2630 Superior Court
Auburn Hills, MI 48326
Tel: 248-391-3700
Fax: 248-391-7824

Seattle, WA
Apex Tool Group
Sales & Service Center
2865 152nd Avenue N.E.
Redmond, WA 98052
Tel: 425-497-0476
Fax: 425-497-0496

England
Cooper Power Tools
GmbH & Co. OHG
a company of
Apex Tool Group, LLC
C/O Spline Gauges
Piccadilly, Tamworth
Staffordshire B78 2ER
United Kingdom
Tel: +44 1827 8741 28
Fax: +44 1827 8741 28

Brazil
Cooper Tools Industrial Ltda.
a company of
Apex Tool Group, LLC
Av. Liberdade, 4055
Zona Industrial - Iporanga
18087-170 Sorocaba
SP Brazil
Tel: +55 15 2383929

Tel: +55 15 2383929 Fax: +55 15 2383260 Houston, TX
Apex Tool Group
Sales & Service Center
6550 West Sam Houston
Parkway North, Suite 200
Houston, TX 77041
Tel: 713-849-2364
Fax: 713-849-2047

York, PA Apex Tool Group Sales & Service Center 3990 East Market Street York, PA 17402 Tel: 717-755-2933 Fax: 717-757-5063

France
Cooper Power Tools SAS
a company of
Apex Tool Group, LLC
25 rue Maurice Chevalier
77330 Ozoir-La-Ferrière
France

Tel: +33 1 6443 2200 Fax: +33 1 6443 1717

Hungary
Cooper Tools Hungaria Kft.
a company of
Apex Tool Group, LLC
Berkenyefa sor 7
Pf: 640
9027 Györ
Hungary
Tel: +36 96 66 1383

Fax: +36 96 66 1135

Lexington, SC Apex Tool Group 670 Industrial Drive Lexington, SC 29072 Tel: 800-845-5629 Tel: 803-951-7544 Fax: 803-358-7681

Canada
Apex Tool Group
Sales & Service Center
5925 McLaughlin Road
Mississauga, Ont. L5R 1B8
Canada

Tel: 905-501-4785 Fax: 905-501-4786

China Cooper (China) Co., Ltd. a company of Apex Tool Group, LLC 955 Sheng Li Road, Heqing Pudong, Shanghai China 201201

Tel: +86-21-28994176 Fax: +86-21-51118446

Apex Tool Group, LLC 1000 Lufkin Road Apex, NC 27539 Phone: 919-387-0099 Fax: 919-387-2614 www.apextoolgroup.com

