

Parts Manual
PL12EN-48EA-H
10/06/2011

Cleco®

OMEGA TECHNOLOGIES

48EA Series
Electronically Controlled Hold-N-Drive Nutrunner



For additional product information visit our website at:
<https://dotcotool.com/product-category/cleco-tools/cleco-corded-electric-nutrunners-cleco-air-tools/cleco-48-series-transducer-control-hold-and-drive-corded-electric-nutrunners/>

Language Version:

This Parts Manual is the ***“Original Instructions”*** intended for all persons who will use or repair these tools.

Product Identification:

Refer to the “Model Nomenclature” page in this document.

Noise and Vibration:

Refer to documents CE-1002DC and CE-1002TD.

General Description:

Brushless DC electric transducer controlled right angle portable nutrunners.

Intended Use:

These DC electric tools are intended for tightening of threaded joints or running down fasteners. Use only for their designated purpose. Do not use as a hammer, lever or other improper usage that can cause tool damage and operator injury.

Copyright protection:

Apex Tool Group, LLC reserves the right to modify, supplement or improve this document or the product without prior notice. This document may not be reproduced in any way, shape or form, in full or parts thereof, or copied to another natural or machine readable language or to a data carrier, whether electronic, mechanical, optical or otherwise without the express permission of Apex Tool Group, LLC.

“A”

48	E	A	X	XXX	H	X	XX	X	XX	X
-----------	----------	----------	----------	------------	----------	----------	-----------	----------	-----------	----------

Tool Series

48

Motor Style

E = Brushless Electric Motor

Tool Type

A = Right Angle

Feature

- = Matrix Tool Connector (Standard)

E = Air LB Connector

Maximum Torque Nm (rounded to nearest Nm)

53 = 53 Nm **135** = 135 Nm

75 = 75 Nm **230** = 230 Nm

110 = 112 Nm

Tool Termination

H = Hold and Drive

Retainer Shaft

3 = 3.5" **6** = 5.875"

4 = 4.0" **9** = 9.5"

5 = 5.375"

Drive Socket

EE = 1/2"

MG = 13mm

MN = 20mm

MU = 27mm (1-1/16")

EF = 9/16"

MH = 14mm

MO = 21mm

MX = 30mm (1-3/16")

EH = 11/16"

MI = 15mm

MP = 22mm

MZ = 32mm (1-1/4")

EJ = 13/16"

MJ = 16mm (5/8")

MQ = 23mm

XX = No Drive Socket

EK = 7/8"

MK = 17mm

MR = 24mm (15/16")

EM = 1"

ML = 18mm

MS = 25mm

EO = 1-1/8"

MM = 19mm (3/4")

MT = 26mm

Style

F = Female Hex

M = Male Hex

T = Torx

O = Female Oval

Hold Socket

BH = 5.16" (8mm) Hex - Apex Bit Holder

EA = 1/4"

M6 = 6mm

MD = 10mm

30 = T30

XXX = No Holding Socket

EC = 3/8"

MA = 7mm

ME = 11mm (7/16")

40 = T40

EE = 1/2"

MB = 8mm (5/16")

MF = 12mm

45 = T45

M5 = 5mm


MC = 9mm

MG = 13mm

50 = T50

Second Oval Dimension

Use unit of measure from width to identify oval requirements, see illustration.

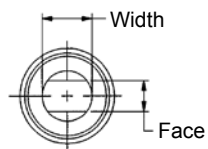

“B”

m-Pro-400 Series
Controller



TME-200 Series
Controller




Complete Tool Order Number
48EA(E)53Hxxxxxx
48EA(E)75Hxxxxxx
48EA(E)110Hxxxxxx
48EA(E)135Hxxxxxx
48EA(E)230Hxxxxxx



m-Pro-400GC
Global Controller



m-Pro-400-IT
Isolation Transformer
(48EA Models)

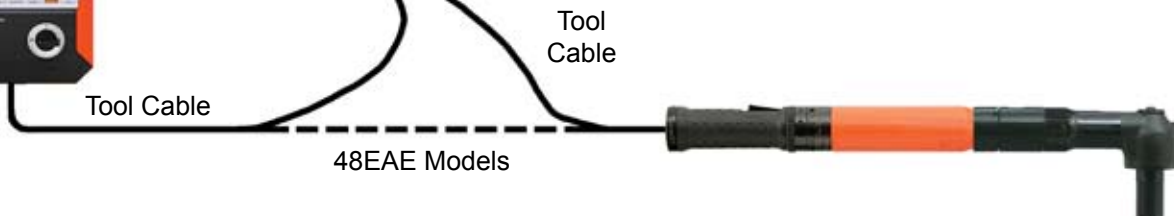

TME and m-Pro-400 Series Controllers

48EA	48EAE	EN Description
115 VAC	Standard	TMEI-114-15-U
115 VAC	DeviceNet	TMEI-114-15-U-ED
115 VAC	ProfiBus	TMEI-114-15-U-EP
TME-200	m-Pro-400	Controller
PL12()-1300	*	Programming Notes
575708	*	Battery
541683-01	*	Power Cord: 115VAC - USA
541683-02	*	Power Cord: 230VAC - USA
541683-03	*	Power Cord: 230VAC - Europe
542779-XXX	301877-XXX	Extension Cable
544056-XXX	301904-XXX	Swivel Cable
544055-XXX	301903-XXX	Swivel Cable - Right Angle
542778-XXX	301866-XXX	Tool Cable

* Note: Contact Apex Tool Group

TME-200 Series Controller

Supply Voltage	EN Order Number
115 VAC	TME-211-15-U
115 VAC	TME-221-15-U
230 VAC	TME-211-30-U
230 VAC	TME-221-30-U


Cleco®

Handle - Matrix Tool Connector

“C1”

Models

48EA53H(-----)
48EA75H(-----)
48EA110H(-----)
48EA135H(-----)
48EA230H(-----)

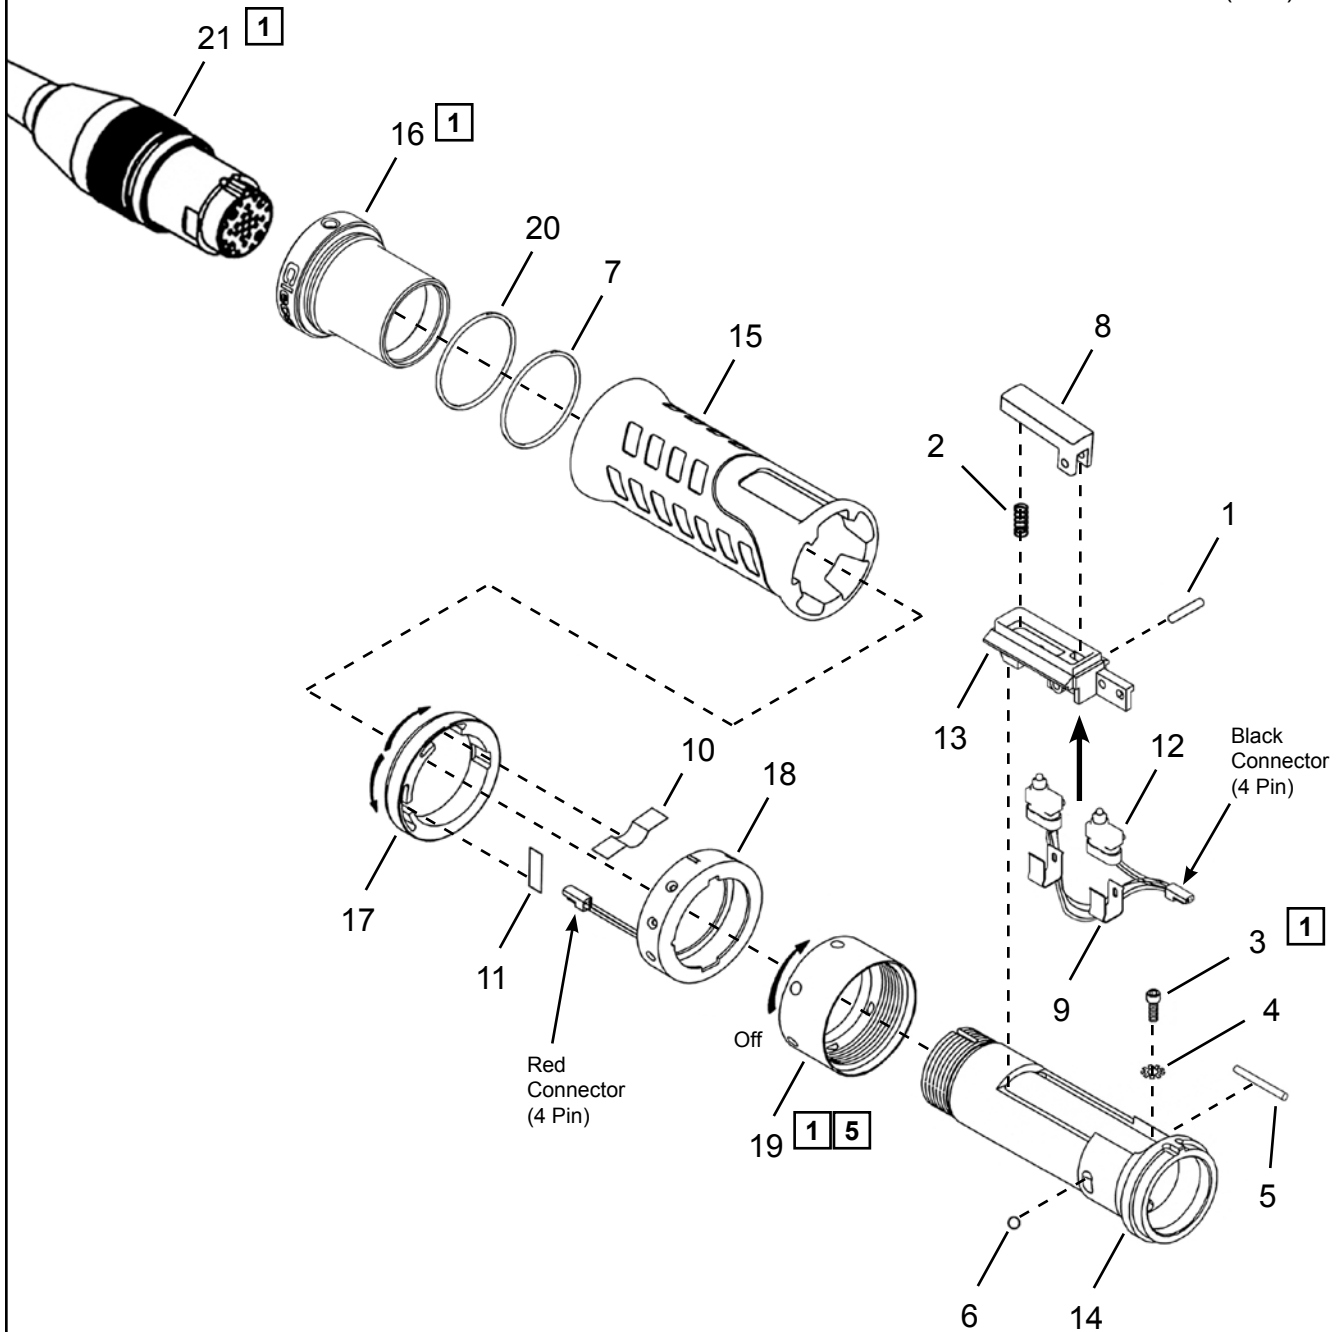

Cleco®
Handle - Matrix Tool Connector

PL12EN-48EA-H
10/06/2011

Illustration "C1"

Ref	Number	#	X	EN
				Description
1	541480	1	3	Switch Pin
2	266255	1	3	Switch Spring
3	B159V	1	3	Cap Screw - #6-32
4	W115	1	3	Lock Washer
5	1009089	1	3	Housing Pin
6	1091PT	1	3	Steel Ball - 3/16"
7	22598	1	3	O-Ring
8	F900185	1		Switch Actuator
9	207317	2	2	Switch Spring Clip
10	541033	1	2	Reverse Spring
11	541624	1	2	Forward/Reverse Spring
12	F900571	1	2	Start/Reverse Switch
13	207316	1		Switch Holder
14	541015	1		Handle
15	207323	1		Handle Sleeve
16	207325	1		Connector Sleeve
17	542938	1		Reverse Ring
18	542819	1		Light Ring Assembly
19	541017	1		Handle Retainer Nut
20	524818	1	3	O-Ring
Tool Cable (Optional Length)				
21	542778-1M	1		1 meter cable
	542778-2M			2 meter cable
	542778-3M			3 meter cable
	542778-6M			6 meter cable
	542778-8M			8 meter cable
	542778-10M			10 meter cable
	542778-15M			15 meter cable
Inline Swivel Cable (Optional Length)				
21	544056-1M	1		1 meter cable
	544056-2M			2 meter cable
	544056-3M			3 meter cable
	544056-6M			6 meter cable
	544056-8M			8 meter cable
	544056-10M			10 meter cable
	544056-15M			15 meter cable
Angle Swivel Cable (Optional Length)				
21	544055-1M	1		1 meter cable
	544055-2M			2 meter cable
	544055-3M			3 meter cable
	544055-6M			6 meter cable
	544055-8M			8 meter cable
	544055-10M			10 meter cable
	544055-15M			15 meter cable
Tool Cable Extension (Optional Length)				
21	542779-1M	1		1 meter cable
	542779-2M			2 meter cable
	542779-3M			3 meter cable
	542779-6M			6 meter cable
	542779-10M			10 meter cable
	542779-15M			15 meter cable
	542779-50M			50 meter cable

(#) Quantity


(X) Recommended Spare Parts

Cleco®
Handle - Air LB Tool Connector

"C2"

Models

48EAE53H(-----)
48EAE75H(-----)
48EAE110H(-----)
48EAE135H(-----)
48EAE230H(-----)

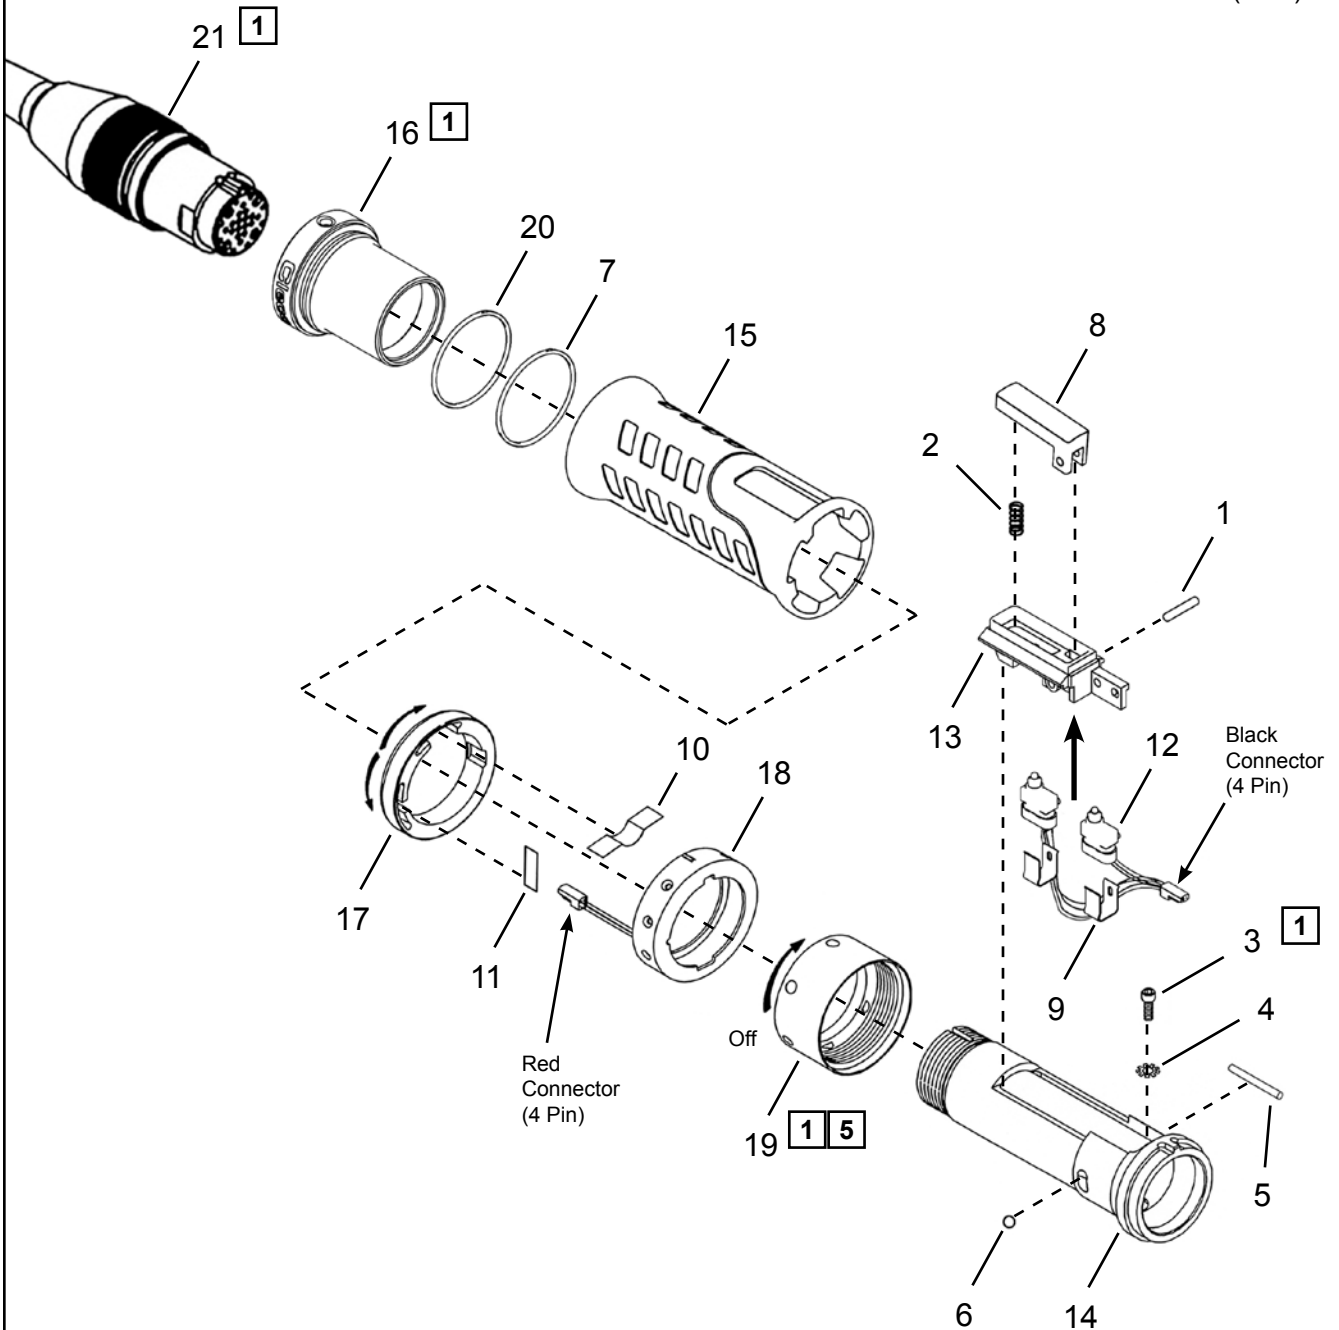

1 5 See Service Notes

Cleco®
Handle - Air LB Tool Connector

PL12EN-48EA-H
10/06/2011

Illustration "C2"

Ref	Number	#	X	EN
				Description
1	541480	1	3	Switch Pin
2	266255	1	3	Switch Spring
3	B159V	1	3	Cap Screw - #6-32
4	W115	1	3	Lock Washer
5	1009089	1	3	Housing Pin
6	1091PT	1	3	Steel Ball - 3/16"
7	22598	1	3	O-Ring
8	F900185	1		Switch Actuator
9	207317	2	2	Switch Spring Clip
10	541033	1	2	Reverse Spring
11	541624	1	2	Forward/Reverse Spring
12	F900571	1	2	Start/Reverse Switch
13	207316	1		Switch Holder
14	207322	1		Handle
15	207323	1		Handle Sleeve
16	207325E	1		Connector Sleeve
17	542938	1		Reverse Ring
18	542819	1		Light Ring Assembly
19	541017	1		Handle Retainer Nut
20	524818	1	3	O-Ring
Tool Cable (Optional Length)				
21	301866-2M	1		2 meter cable
	301866-3M			3 meter cable
	301866-4M			4 meter cable
	301866-6M			6 meter cable
	301866-8M			8 meter cable
	301866-10M			10 meter cable
	301866-15M			15 meter cable
Inline Swivel Cable (Optional Length)				
21	301904-2M	1		2 meter cable
	301904-3M			3 meter cable
	301904-8M			8 meter cable
	301904-15M			15 meter cable
Angle Swivel Cable (Optional Length)				
21	301903-2M	1		2 meter cable
	301903-3M			3 meter cable
	301903-8M			8 meter cable
	301903-15M			15 meter cable
Tool Cable Extension (Optional Length)				
21	301877-4M	1		4 meter cable
	301877-8M			8 meter cable
	301877-10M			10 meter cable
	301877-20M			20 meter cable
	301877-30M			30 meter cable
	301877-40M			40 meter cable
	301877-50M			50 meter cable

(#) Quantity


(X) Recommended Spare Parts

Cleco® Motor - Matrix Tool Connector

"D1"

Models

48EA53H(-----)
48EA75H(-----)
48EA110H(-----)
48EA135H(-----)
48EA230H(-----)

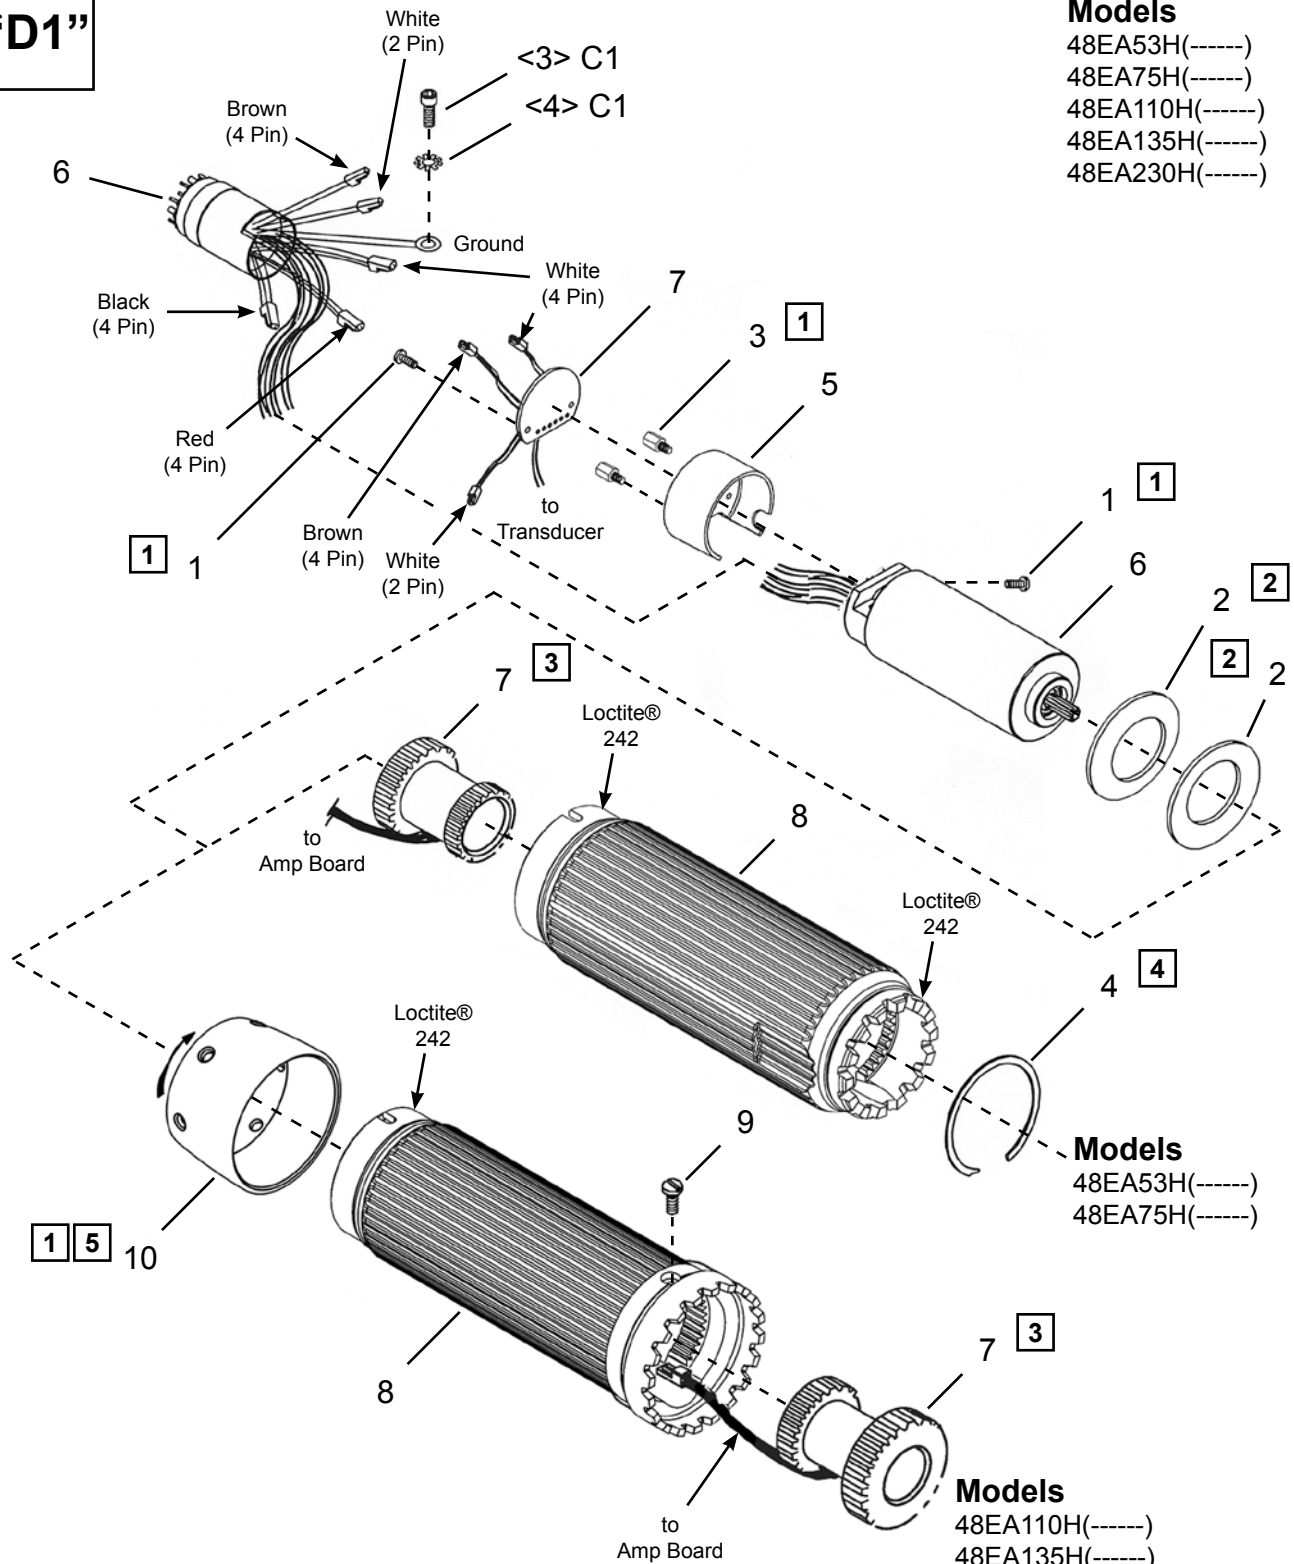

1 2 3 4 5 See Service Notes

Cleco®
Motor - Matrix Tool Connector

PL12EN-48EA-H
10/06/2011

Illustration "D1"


Ref	Number	#	X	EN
				Description
1	17-111	3	6	Pan Head Screw - #4-40 x .19
2	541009	2	2	Wave Washer
3	542244	2	2	Stand Off - 5/16"
4	Table "D1"	1	2	Retaining Ring
5	542588	1		Motor Spacer
6	301761	1		Motor Assembly
7	Table "D1"	1		Transducer Assembly
8	Table "D1"	1		Housing
9	Table "D1"	1	3	Pan Head Screw - #4-40 x 1/4
10	Table "D1"	1		Lock Nut

(#) Quantity

(X) Recommended Spare Parts

Table "D1"

Ref.	Description	#	48EA53	#	48EA75	#	48EA110 48EA135	#	48EA230
4	Retaining Ring	1	505306	1	505306		-----		-----
7	Transducer (unprogrammed)	1	542846-31	1	542846-48	1	542846-100	1	542846-40
	Transducer (programmed)	1	542846-31P	1	542846-48P	1	542846-100P	1	542846-40P
	Transducer Capacity		31 Nm		48 Nm		100 Nm		40 Nm
8	Housing	1	207340	1	207340	1	207341	1	207341
9	Screw		-----		-----	1	B159X	1	B159X
10	Lock Nut		-----		-----	1	207353	1	207353

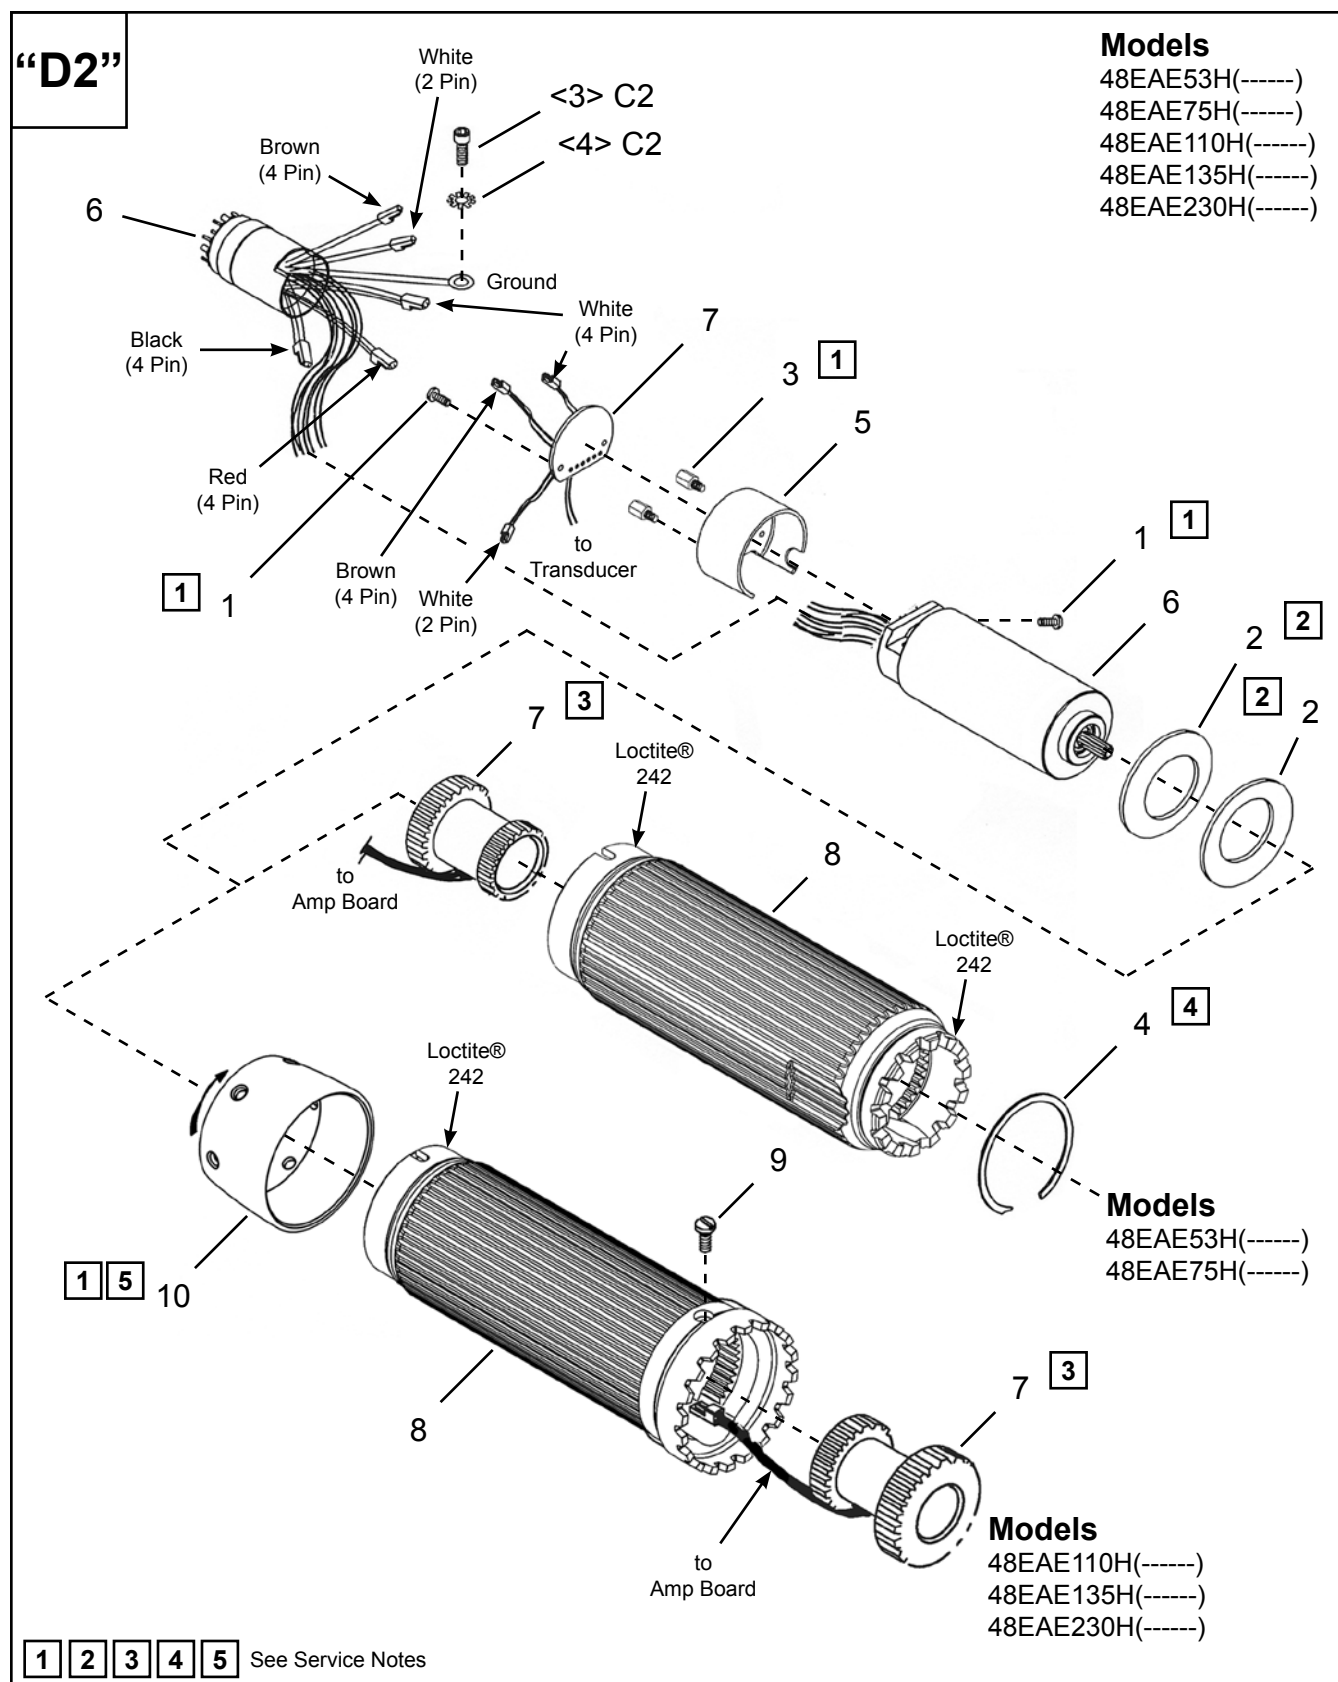

Cleco®
Motor - Air LB Tool Connector

PL12EN-48EA-H
10/06/2011

Illustration "D2"

Ref	Number	#	X	EN
				Description
1	17-111	3	6	Pan Head Screw - #4-40 x .19
2	541009	2	2	Wave Washer
3	542244	2	2	Stand Off - 5/16"
4	Table "D2"	1	2	Retaining Ring
5	542588	1		Motor Spacer
6	301761E	1		Motor Assembly
7	Table "D2"	1		Transducer Assembly
8	Table "D2"	1		Housing
9	Table "D2"	1	3	Pan Head Screw - #4-40 x 1/4
10	Table "D2"	1		Lock Nut

(#) Quantity

(X) Recommended Spare Parts

Table "D2"


Ref.	Description	#	48EAE53	#	48EAE75	#	48EAE110 48EAE135	#	48EAE230
4	Retaining Ring	1	505306	1	505306		-----		-----
7	Transducer (unprogrammed)	1	542846-31	1	542846-48	1	542846-100	1	542846-40
	Transducer (programmed)	1	542846-31P	1	542846-48P	1	542846-100P	1	542846-40P
	Transducer Capacity		31 Nm		48 Nm		100 Nm		40 Nm
8	Housing	1	207340	1	207340	1	207341	1	207341
9	Screw		-----		-----	1	B159X	1	B159X
10	Lock Nut		-----		-----	1	207353	1	207353

“E”

Models

48EA(E)53H(-----)

48EA(E)75H(-----)

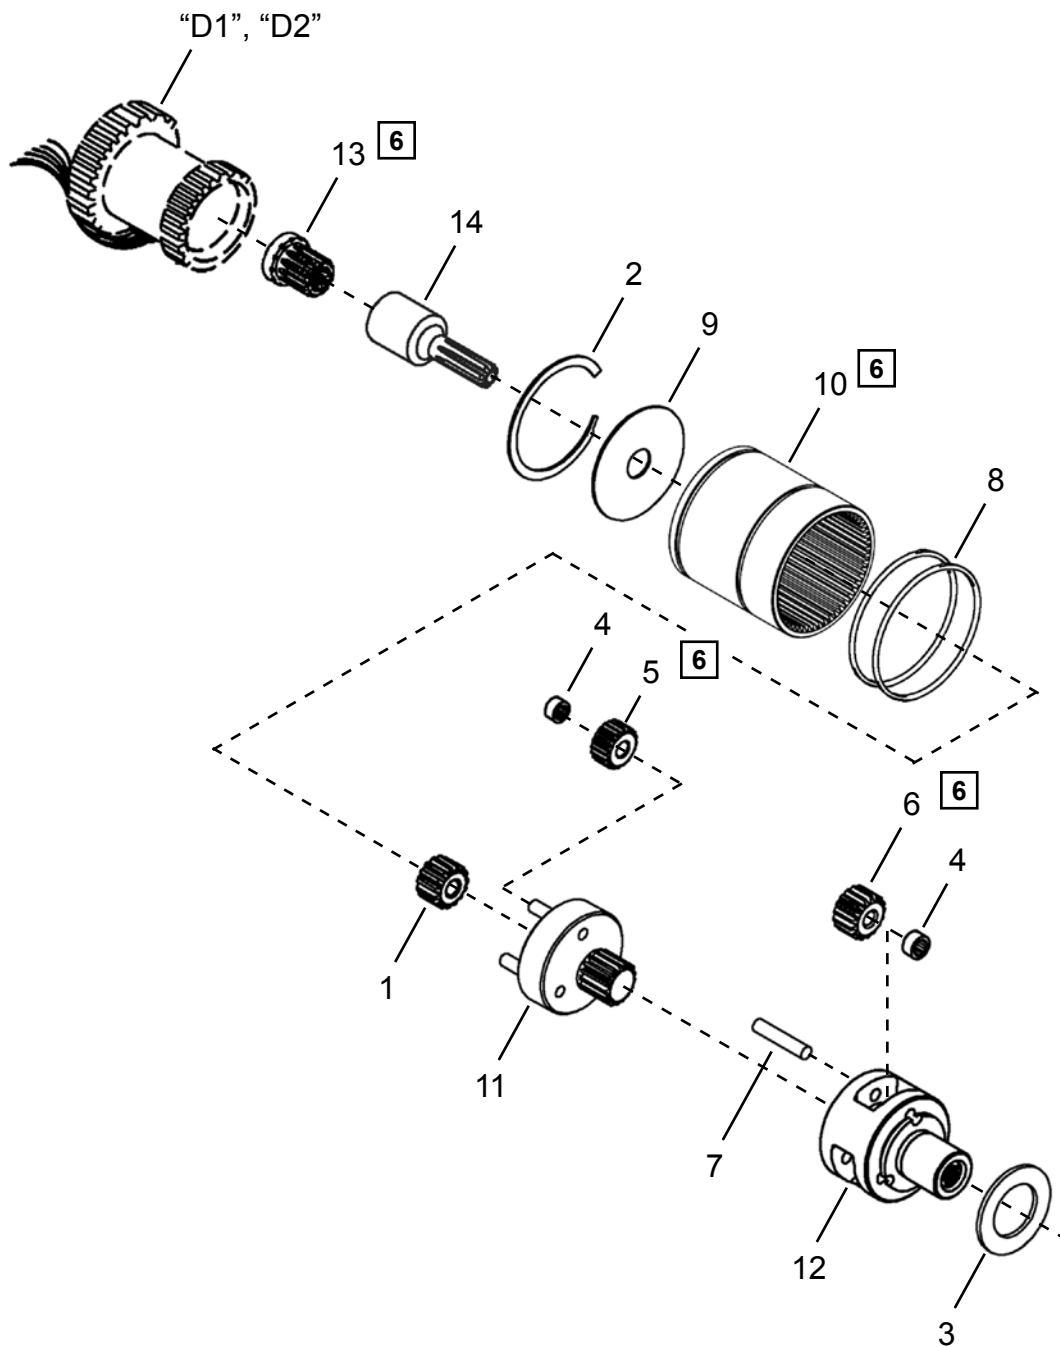

6 See Service Notes

Cleco®
Double Stage Gearing

PL12EN-48EA-H
10/06/2011

Illustration "E"

Ref	Number	#	X	EN
				Description
1	541899	1	3	Slip-On Gear (17T)
2	800116	1	2	Retaining Ring
3	207303	1	2	Thrust Washer
4	203749	6	12	Needle Bearing
5	541894	3	6	Planet Gear (17T)
6	Table "E"	3	6	Planet Gear
7	541888	3	6	Planet Pin
8	542724	2	6	O-Ring
9	541887	1	2	Washer
10	542722	1		Ring Gear
11	Table "E"	1		Planet Carrier
12	Table "E"	1		Planet Cage
13	541044	1	2	Pinion Adapter
14	541898	1	2	Extension Pinion

(#) Quantity

(X) Recommended Spare Parts

(T) Teeth

Table "E"

Ref.	Description	#	48EA(E)53	#	48EA(E)75
6	Planet Gear	3	541894 (17T)	3	541897 (20T)
11	Planet Carrier	1	542230	1	542233
12	Planet Cage	1	542079	1	542099


(T) Teeth

Cleco®
Double Stage Gearing

"F"

Models

48EA(E)110H(-----)
48EA(E)135H(-----)

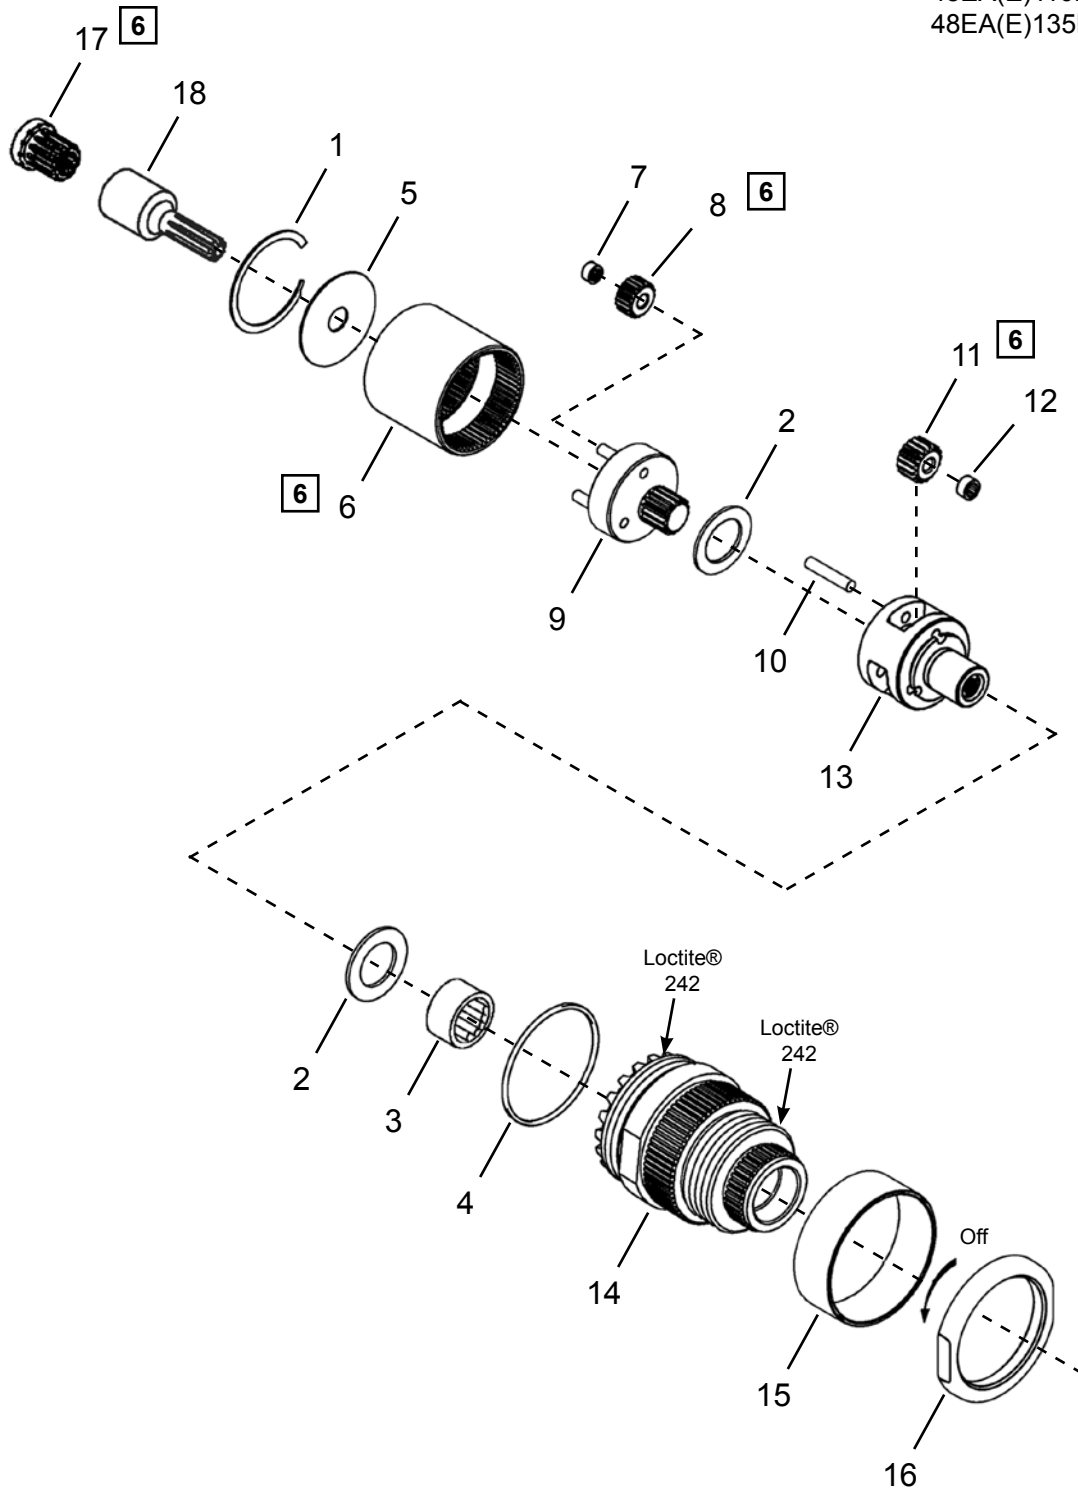

6 See Service Notes

Cleco®
Double Stage Gearing

PL12EN-48EA-H
10/06/2011

Illustration "F"

Ref	Number	#	X	EN
				Description
1	541210	1	2	Retaining Ring
2	510675	2	4	Thrust Washer
3	800177	1	3	Needle Bearing
4	1010843	1	3	O-Ring
5	541185	1		Washer
6	541167	1		Ring Gear
7	541488	3	6	Needle Bearing
8	541478	3	6	Planet Gear (27T)
9	Table "F"	1		Planet Carrier
10	541492	3	6	Planet Pin
11	Table "F"	3	6	Planet Gear
12	541489	3	6	Needle Bearing
13	Table "F"	1		Planet Cage
14	541045	1		Gear Case (includes Ref. 3)
15	541169	1		Cover
16	207352	1		Retaining Nut
17	541044	1	2	Pinion Adapter
18	541898	1	2	Extension Pinion

(#) Quantity

(X) Recommended Spare Parts

(T) Teeth

Table "F"


Ref.	Description	#	48EA(E)110	#	48EA(E)135
9	Planet Carrier	1	542333	1	542332
11	Planet Gear	3	541474 (17T)	3	541475 (21T)
13	Planet Cage	1	541279	1	541278

(T) Teeth

Cleco®
Triple Stage Gearing

“G”

Models
48EA(E)230H(-----)

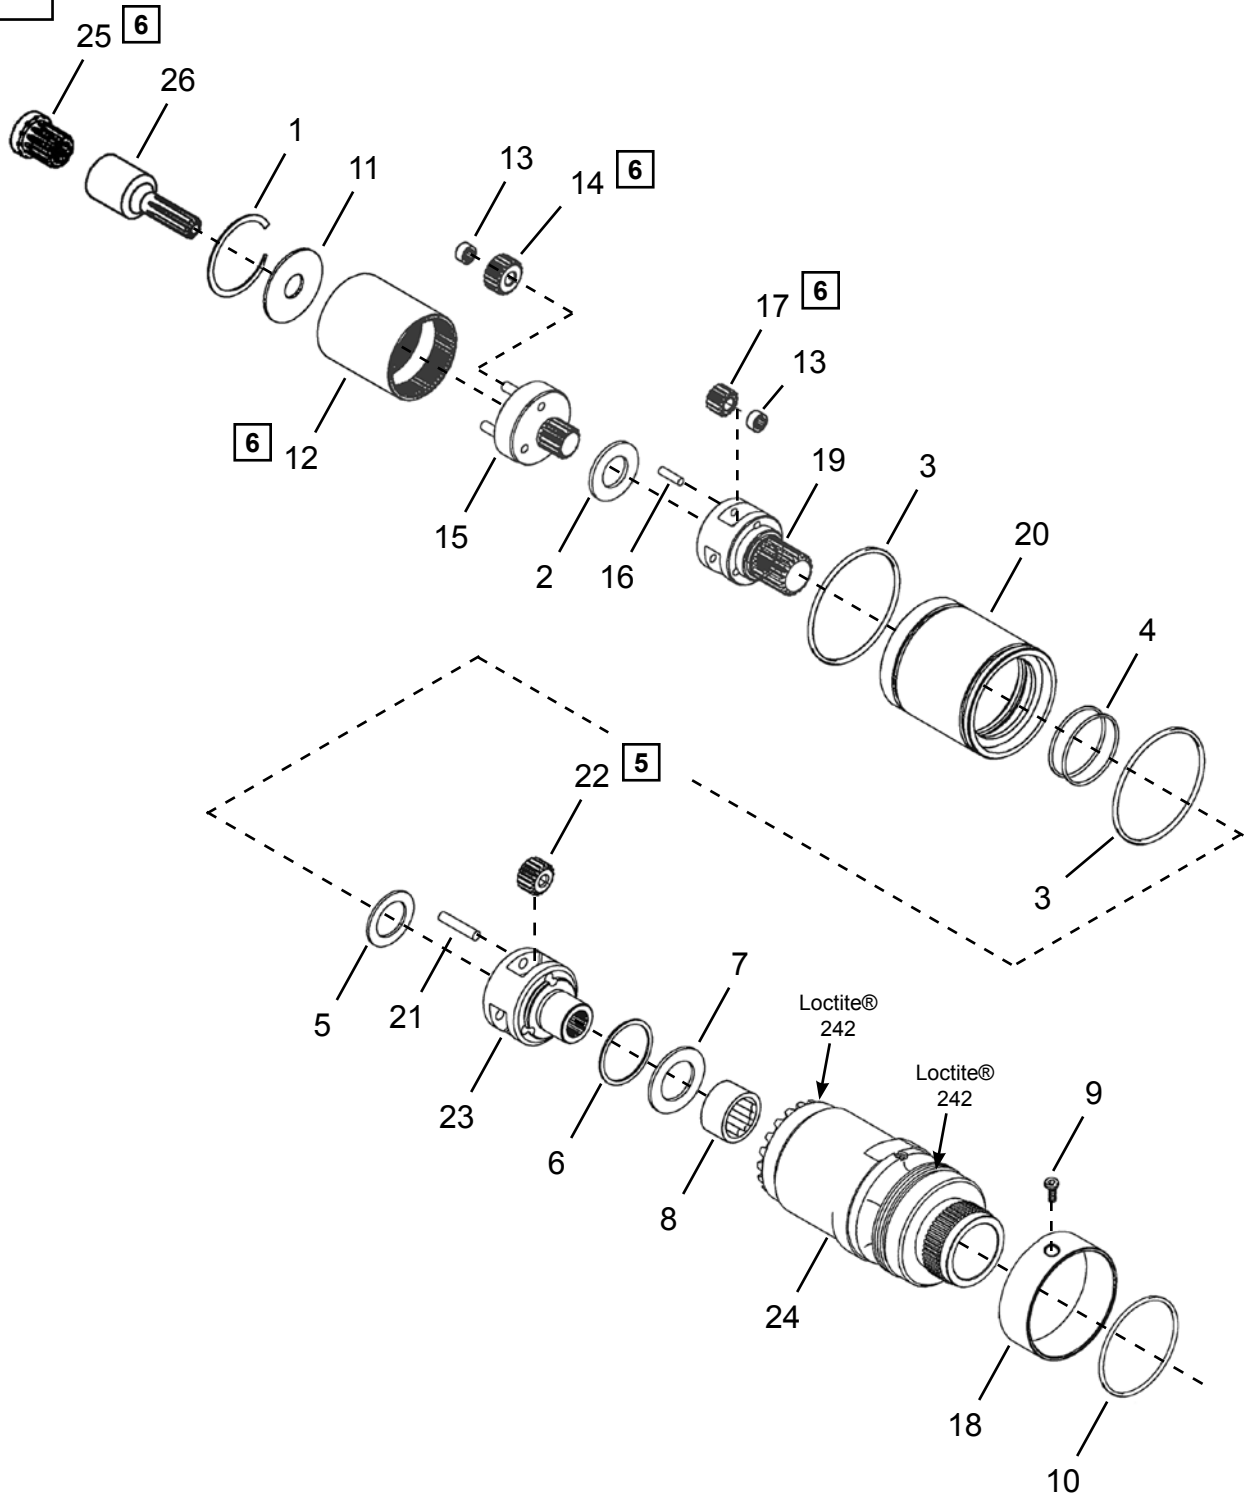

6 See Service Notes

Cleco®
Triple Stage Gearing

PL12EN-48EA-H
10/06/2011

Illustration "G"

Ref	Number	#	X	EN
				Description
1	503405	1	2	Retaining Ring
2	542536	1	2	Thrust Washer
3	1012614	2	4	O-Ring
4	22598	2	4	O-Ring
5	510675	1	2	Thrust Washer
6	800201	1	2	Retaining Ring
7	502981	1	2	Thrust Washer
8	800168	1	3	Needle Bearing
9	B124Z	1	2	Socket Head Cap Screw - #6-32 x 1/4
10	30923	1	3	O-Ring
11	542337	1	2	Washer
12	541008	1		Ring Gear
13	203749	6	12	Needle Bearing
14	541477	3	6	Planet Gear (20T)
15	542327	1		Planet Carrier
16	541480	3	6	Planet Pin
17	541472	3	6	Planet Gear (14T)
18	542473	1		Cover
19	542531	1		Planet Cage
20	541438	1		Ring Gear Adapter
21	510754	3	6	Planet Pin
22	542474	3	6	Planet Gear (16T)
23	541436	1		Planet Cage
24	542471	1		Gear Case (includes Ref. 8 - 9)
25	541044	1	2	Pinion Adapter
26	541898	1	2	Extension Pinion


(#) Quantity

(X) Recommended Spare Parts

(T) Teeth

Cleco®
Hold and Drive Adapters


"H"

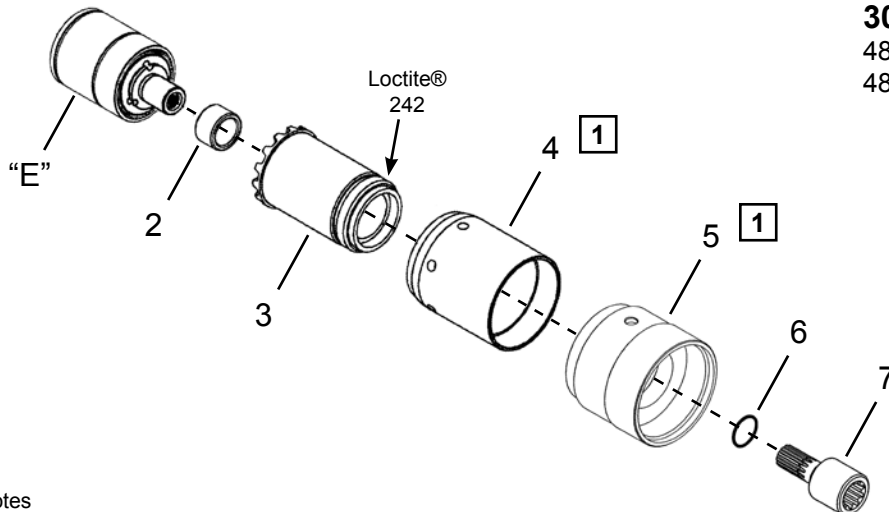

301788 Adapter
48EA(E)53H(-----)
48EA(E)75H(-----)

1 See Service Notes


"I"

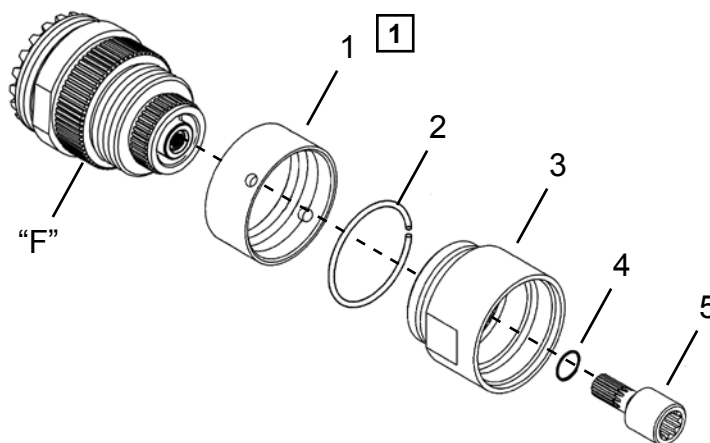

301909 Adapter
48EA(E)110H(-----)
48EA(E)135H(-----)

1 See Service Notes

"J"

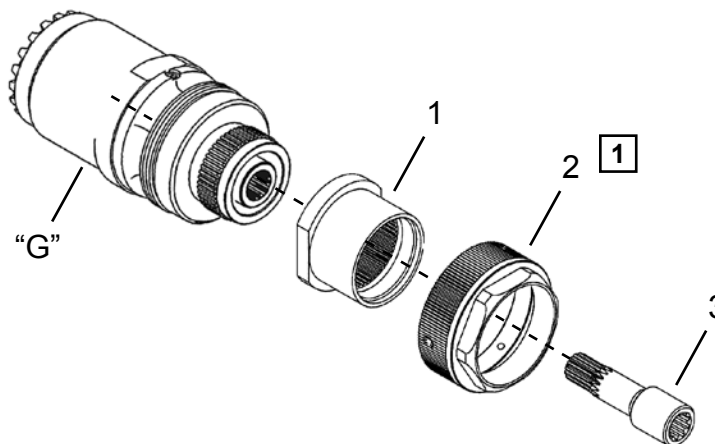

301915 Adapter
48EA(E)230H(-----)

1 See Service Notes

Cleco®
Hold and Drive Adapters

PL12EN-48EA-H
10/06/2011

Illustration "H"

Ref	Number	#	X	EN
				Description
1	301789	1		Angle Head Adapter Assembly (includes Ref. 2-5)
2	500528	1	3	Needle Bearing
3	207347	1		Angle Head Adapter
4	543462-02	1		Gear Case Nut
5	207346	1		Angle Head Adapter
6	800146	1	2	Retaining Ring
7	543063	1	1	Drive Adapter

(#) Quantity

(X) Recommended Spare Parts

Illustration "I"

Ref	Number	#	X	EN
				Description
1	543065	1		Lock Nut
2	543062	1	2	Retaining Ring
3	543064	1		Attachment Adapter
4	800146	1	2	Retaining Ring
5	543063	1	1	Pinion Adapter

(#) Quantity

(X) Recommended Spare Parts


Illustration "J"

Ref	Number	#	X	EN
				Description
1	543066	1		Attachment Adapter
2	543068	1		Lock Nut
3	543067	1	1	Pinion Adapter

(#) Quantity

(X) Recommended Spare Parts

"K"

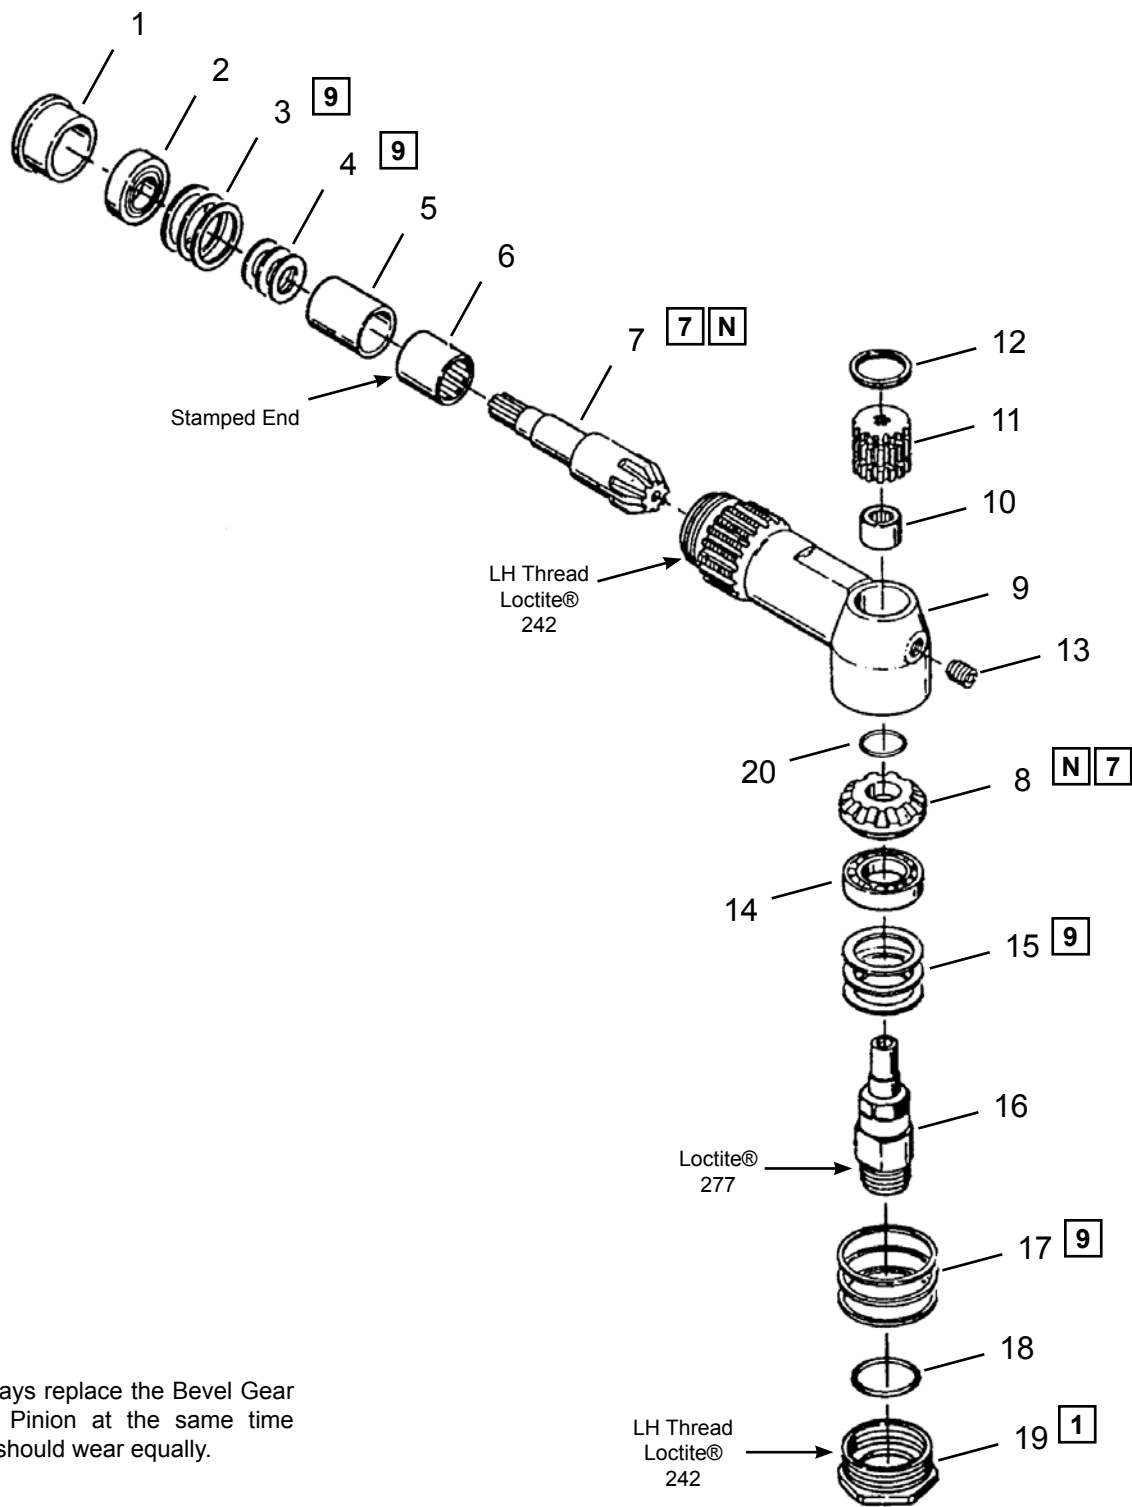

N

NOTE: Always replace the Bevel Gear and Bevel Pinion at the same time since they should wear equally.

1 7 9 See Service Notes

Cleco®
49096037 Hold-N-Drive Attachment

PL12EN-48EA-H
10/06/2011

Illustration "K"


Ref	Number	#	X	EN
				Description
1	48018105	1		Spacer
2	92100133	1	2	Ball Bearing
3	12601137A2	AR	AR	Shim (.002")
	12601137A3	AR	AR	Shim (.003")
	12601137A5	AR	AR	Shim (.005")
4	94200020	AR	AR	Shim (.002")
	94200021	AR	AR	Shim (.003")
	94200022	AR	AR	Shim (.005")
5	48019142	1		Bearing Spacer
6	92000057	1	3	Needle Bearing
7	48017139	1	1	Bevel Pinion
8	48017140	1	1	Bevel Gear
9	49098133	1		Angle Housing (includes Ref. 13)
10	90000037	1	3	Needle Bearing
11	49098134	1		Retainer Cap
12	92800027	1	3	Retaining Ring
13	93440004	1	3	Pipe Plug
14	92100120	1	2	Ball Bearing
15	94200037	AR	AR	Shim (.002")
	94200038	AR	AR	Shim (.003")
	94200039	AR	AR	Shim (.005")
16	49097136	1		Drive Spindle
17	48019148	AR	AR	Shim (.002")
	48019149	AR	AR	Shim (.003")
	48019150	AR	AR	Shim (.005")
18	93010024	1	3	O-Ring
19	48017138	1		Retaining Nut
20	865233	1	3	Retaining Ring

(#) Quantity

(X) Recommended Spare Parts

Cleco®
Hold-N-Drive Outut Spindles

“L”

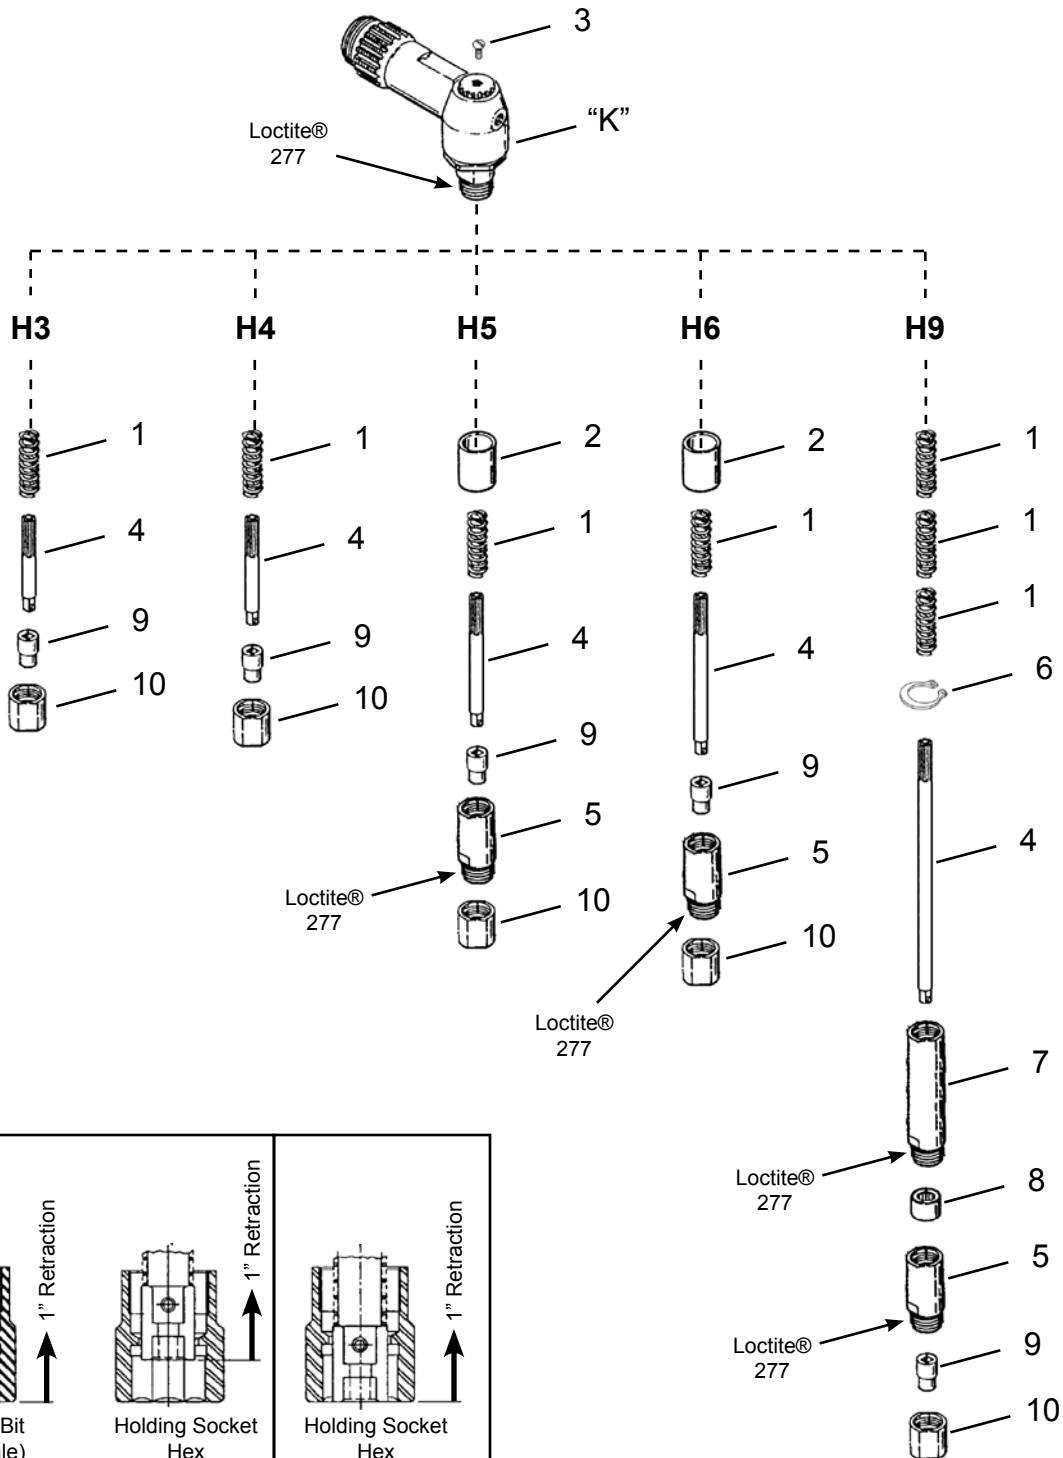

Cleco®

Hold-N-Drive Outut Spindles

PL12EN-48EA-H

10/06/2011

Illustration "L"

Ref	Number	#	X	EN
				Description
1	94070703	1	3	Spring (H3, H4, H5, H6)
	94070703	3	9	Spring (H9)
2	49098199	1		Support Bushing
3	93300034	1	3	Screw
4	Table "L"	1		Retainer Shaft
5	49097151	1		Extension Adapter
6	92670001	1	3	Retaining Ring
7	49097209	1		Extension Adapter
8	92190006	1	3	Needle Bearing
9	Table "L1"	1	2	Holding Socket
10	Table "L2"	1	2	Driving Socket

(#) Quantity

(X) Recommended Spare Parts

Table "L"

Ref.	Description	#	H3	#	H4	#	H5	#	H6	#	H9
4	Retainer Shaft	1	49098138	1	49098135	1	49097152	1	49097153	1	49097163
	Shaft Length		3-1/2" (89mm)		4" (102mm)		5-3/8" (137mm)		5-7/8" (149mm)		9-1/2" (241mm)

Table "L1"

Ref. # 9 - Holding Socket											
Inch - Hex			Metric - Hex			Torx			Oval		
Size	Code	Number	Size	Code	Number	Size	Code	Number	Size	Code	Number
1/4" male	MEA	49098126	5mm male	MM5	49098157	T30 male	T30	49098219	1/4" x 5/16"	OEAB	49099117
1/4" female	FEA	49098155	5mm female	FM5	49098230	T40 male	T40	49099171	5/16" x 3/8"	OEBC	49098149
5/16" male	MMB	49098211	6mm male	MM6	49098125	T45 male	T45	49099154	5 x 7 mm	OM5A	49098231
5/16" female	FMB	49098148	6mm female	FM6	49099218	T50 male	T50	49099146	5 x 8 mm	OM5B	49098224
3/8" male	MEC	49098127	7mm male	MMA	49098124				6 x 7 mm	OM6A	49098227
7/16" female	FME	49098180	7mm female	FMA	49098208				6 x 8 mm	OM6B	49099204
			8mm male	MMB	49098211				8 x 10 mm	OMBD	49098184
			8mm female	FMB	49098148				9 x 10 mm	OMCD	49098228
			9mm male	MMC	49098210				10 x 12 mm	OMDF	49099215
			9mm female	FMC	49098207						
			10mm male	MMD	49098201						
			10mm female	FMD	49098179						
			11mm female	FME	49098180						
			12mm female	FMF	49098182						

Note: XXX = No Holding Socket

Apex Bit Holder			Apex Hex Insert Bits		Apex Torx Insert Bits	
Size	Code	Number	1/4" Hex	5/16" Hex	1/4" Hex	5/16" Hex
1/4" hex	FBH4	207513	185-5mm	315-5mm	440-TX-15X	
5/16" hex	FBH5	207385	185-6mm	315-6mm	440-TX-20X	480-TX-20X
			185-6X	315-6X	440-TX-25X	480-TX-25X
8mm hex	FBH5	207385	185-7mm	315-7mm	440-TX-30X	480-TX-30X
			185-8mm	315-8mm	440-TX-40X	480-TX-40X
			185-9mm			480-TX-45X
			185-8X	315-8X		480-TX-50X
			185-10mm	315-10mm		
					440-TX-15IPX	
					440-TX-20IPX	
					440-TX-30IPX	480-30IPX
						480-40IPX
						480-45IPX
						480-50IPX

Table "L2"

Ref. # 10 - Driving Socket					
Code		Hex Size		Part Number	
Metric	Inch	mm	Inch		
MG		13		0.512	49097217
MH		14		0.551	49097175
	EF		9/16	0.562	49097114
MI		15		0.591	49097112
MJ		16	5/8	0.630	49097130
MK		17		0.669	49097177
	EH		11/16	0.688	49097115
ML		18		0.709	49097118
MM		19	3/4	0.750	49097120
MO		21		0.827	49097119
MP		22		0.866	49097176
MQ		23		0.905	49097218
MR		24	15/16	0.945	49097147
MU		27	1-1/16	1.063	49097212
XX	XX				No Socket

Cleco®

Reaction Bar Installation


“M”**Models:**

48EA(E)75H(-----)



Reaction bar and bracket should always be used in higher torque applications such as above 50 ft.-lbs. (68 Nm) or in closed-quarter areas where injury to fingers could occur.

1 See Service Notes

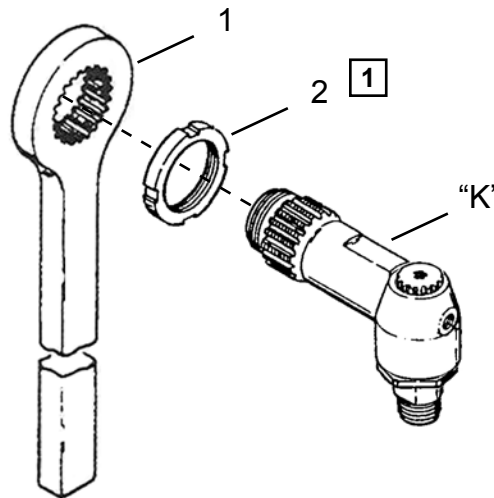**“N”****Models:**

48EA(E)110H(-----)


48EA(E)135H(-----)



Reaction bar and bracket should always be used in higher torque applications such as above 50 ft.-lbs. (68 Nm) or in closed-quarter areas where injury to fingers could occur.

Unscrew Nut (5) and remove the Cover (6). Install Bracket (1) and Splined Key (4). Re-install Nut (5). Customer supplied Reaction Bar bends to fit the application.

1 8 See Service Notes

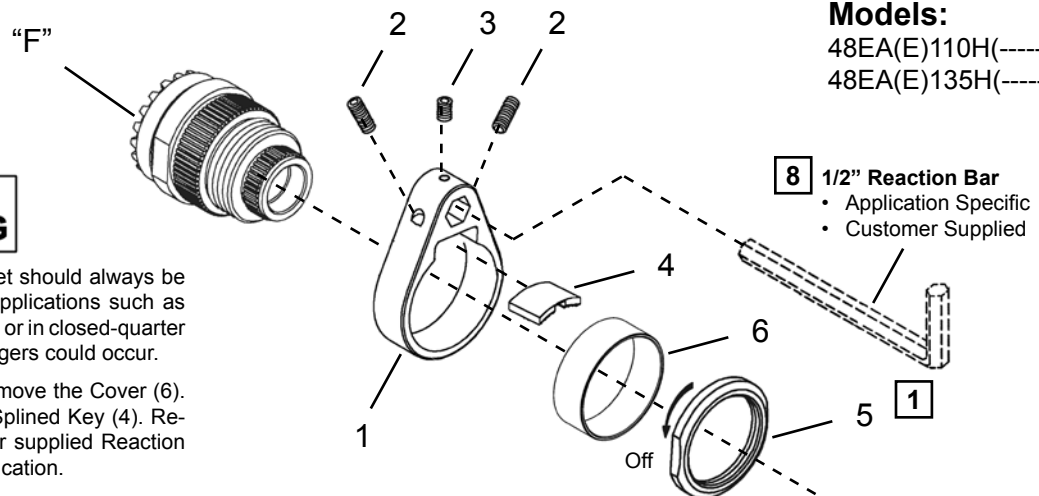**“O”****Models:**


48EA(E)230H(-----)



Reaction bar and bracket should always be used in higher torque applications such as above 50 ft.-lbs. (68 Nm) or in closed-quarter areas where injury to fingers could occur.

Remove the Cover (7). Install Bracket (1) over Gear Case hex. Install Locking Sleeve (5), Washer (3), Bolt (2) and Nut (6). Customer supplied Reaction Bar bends to fit the application.

1 8 See Service Notes

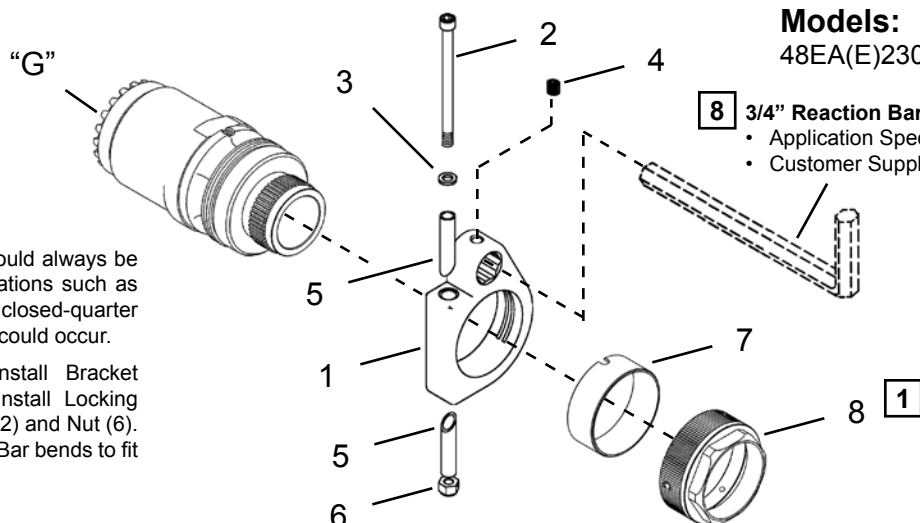

Cleco®
Reaction Bar Installation

PL12EN-48EA-H
10/06/2011

Illustration "M"

Ref	Number	#	X	EN
				Description
1	48038160	1		Reaction Bar
2	49098103	1		Lock Nut

(#) Quantity

(X) Recommended Spare Parts

Illustration "N"

Ref	Number	#	X	EN
				Description
1	541206	1		Bracket (includes Ref. 2-3)
2	B132Z	2	4	Set Screw - #8-32 x 1/2
3	B129J	1	2	Set Screw - #8-32 x 5/16
4	541207	1		Splined Key
5	207352	1		Retaining Nut
6	541169	1		Cover

(#) Quantity

(X) Recommended Spare Parts

Illustration "O"

Ref	Number	#	X	EN
				Description
1	531297	1		Bucking Bar Collar (includes Ref. 2-6)
2	B156A	1	2	Socket Head Screw
3	25285	1	2	Washer
4	B110D	1	3	Set Screw
5	531281	2	2	Locking Sleeve
6	C108Y	1	3	Nut
7	542473	1		Cover
8	543068	1		Retaining Nut


(#) Quantity

(X) Recommended Spare Parts

1 Tightening Torque


Illustration	Reference	Tightening torque	
		Ft-Lbs (in-lbs)	Nm
C1, C2	3	(10-14)	1,1-1,6
	16	25-30	34-41
	19	35-40	47-54
	21 (Swivel)	15-18	20-25
D1, D2	1	(4-6)	0,45-0,68
	3	(4-6)	0,45-0,68
	10	35-40	47-54
H	4	40-50	54-68
	5	40-50	54-68
I	1	40-50	54-68
J	2	40-50	54-68
K	19	80-100	108-136
M	2	40-50	54-68
N	5	40-50	54-68
O	8	40-50	54-68

3 Transducer Identification

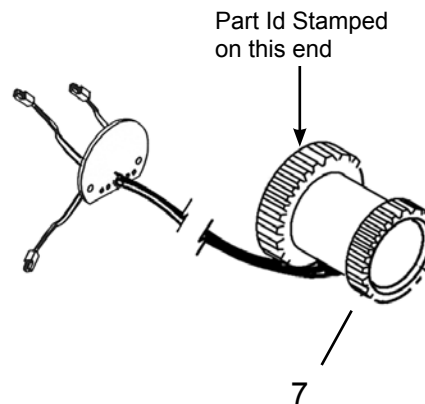


Transducers are not interchangeable, check part number.


2 Washer Assembly

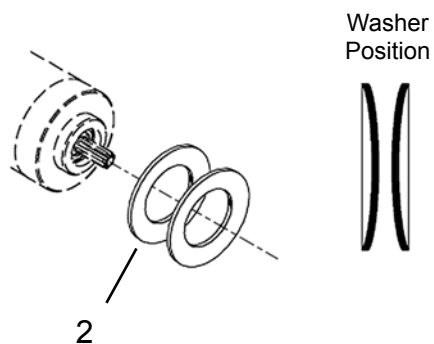

4 Retaining Ring Assembly

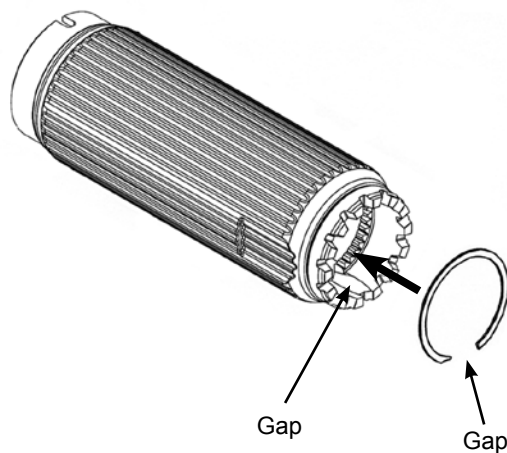


5 Spanner Wrench

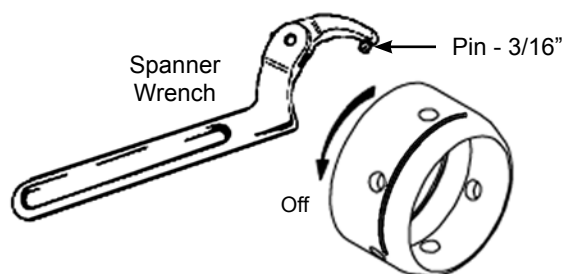


7 Angle Head Lubrication

540395 - 2 oz. (56 g)
513156 - 1 pound (0.45 kg)

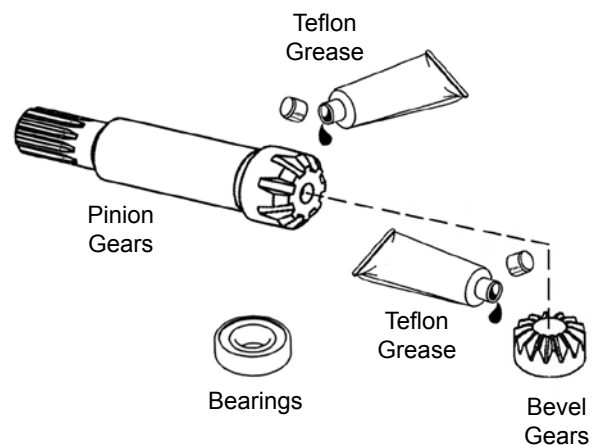


6 Gear Train Lubrication


541444 - 2 oz. (56 g)
541445 - 1 pound (0.45 kg)

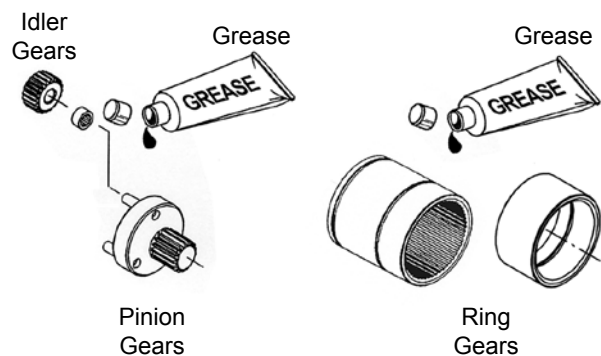

8 Torque Reaction

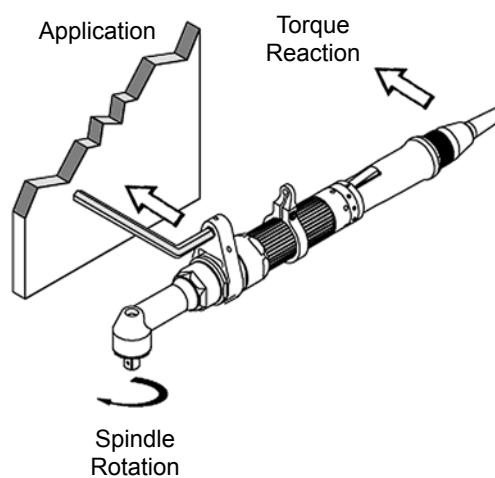

9 Shim Assembly

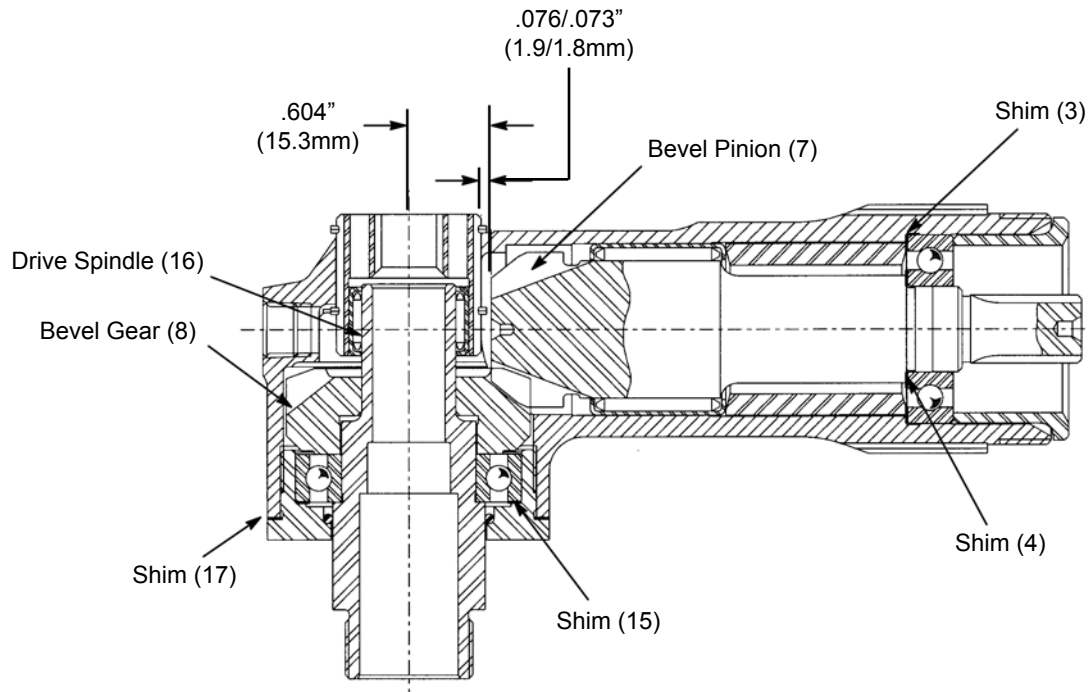

Assembly Notes:

Bevel Pinion: Use shims 3 or 4 to obtain the dimension shown.

Bevel Gear / Drive Spindle: Run the gears under load. Use shims 15 and 17 to obtain a .002/.004" (.05/.10mm) backlash

Cleco®
Tool Memory Parameters

PL12EN-48EA-H
10/06/2011

48EA(E) Tool Memory Parameters

Model Number	Max Speed [RPM]	Max Torque [Nm]	Torque Cal [Nm]	Transducer Type	Angle Cal [PPD]	Static Current Factor [Nm/A]
48EA(E)53Hxxxxxx	850	53	65.5212	542846-31	100.4132	2.2130
48EA(E)75Hxxxxxx	600	74	99.3649	542846-48	141.6898	3.1227
48EA(E)110Hxxxxxx	400	112	203.5980	542846-100	213.0167	4.6946
48EA(E)135Hxxxxxx	270	134	201.4084	542846-100	318.8948	7.0280
48EA(E)230Hxxxxxx	150	227	297.2863	542846-40	567.7714	11.8873

Sales & Service Centers

Note: All locations may not service all products. Please contact the nearest Sales & Service Center for the appropriate facility to handle your service requirements.

Dallas, TX
**Apex Tool Group
Sales & Service Center**
1470 Post & Paddock
Grand Prairie, TX 75050
Tel: 972-641-9563
Fax: 972-641-9674

Detroit, MI
**Apex Tool Group
Sales & Service Center**
2630 Superior Court
Auburn Hills, MI 48326
Tel: 248-391-3700
Fax: 248-391-7824

Houston, TX
**Apex Tool Group
Sales & Service Center**
6550 West Sam Houston
Parkway North, Suite 200
Houston, TX 77041
Tel: 713-849-2364
Fax: 713-849-2047

Lexington, SC
Apex Tool Group
670 Industrial Drive
Lexington, SC 29072
Tel: 800-845-5629
Tel: 803-951-7544
Fax: 803-358-7681

Los Angeles, CA
**Apex Tool Group
Sales & Service Center**
15503 Blackburn Avenue
Norwalk, CA 90650
Tel: 562-623-4457
Fax: 562-802-1718

Seattle, WA
**Apex Tool Group
Sales & Service Center**
2865 152nd Avenue N.E.
Redmond, WA 98052
Tel: 425-497-0476
Fax: 425-497-0496

York, PA
**Apex Tool Group
Sales & Service Center**
3990 East Market Street
York, PA 17402
Tel: 717-755-2933
Fax: 717-757-5063

Canada
**Apex Tool Group
Sales & Service Center**
5925 McLaughlin Road
Mississauga, Ont. L5R 1B8
Canada
Tel: 905-501-4785
Fax: 905-501-4786

Germany
**Apex Tool Group
GmbH & Co. OHG**
Industriestraße 1
73463 Westhausen
Germany
Tel: +49 (0) 73 63 81 0
Fax: +49 (0) 73 63 81 222

England
**Apex Tool Group
GmbH & Co. OHG**
C/O Spline Gauges
Piccadilly, Tamworth
Staffordshire B78 2ER
United Kingdom
Tel: +44 1827 8741 28
Fax: +44 1827 8741 28

France
Apex Tool Group SAS
25 rue Maurice Chevalier
77330 Ozoir-La-Ferrière
France
Tel: +33 1 6443 2200
Fax: +33 1 6443 1717

China
Cooper (China) Co., Ltd.
a company of
Apex Tool Group, LLC
955 Sheng Li Road,
Heqing Pudong, Shanghai
China 201201
Tel: +86-21-28994176
Fax: +86-21-51118446

Mexico
**Cooper Tools
de México S.A. de C.V.**
a company of
Apex Tool Group, LLC
Vialidad El Pueblito #103
Parque Industrial Querétaro
Querétaro, QRO 76220
Mexico
Tel: +52 (442) 211-3800
Fax: +52 (442) 103-0443

Brazil
Cooper Tools Industrial Ltda.
a company of
Apex Tool Group, LLC
Av. Liberdade, 4055
Zona Industrial - Iporanga
18087-170 Sorocaba
SP Brazil
Tel: +55 15 2383929
Fax: +55 15 2383260

Hungary
Cooper Tools Hungaria Kft.
a company of
Apex Tool Group, LLC
Berkenyefa sor 7
Pf: 640
9027 Győr
Hungary
Tel: +36 96 66 1383
Fax: +36 96 66 1135

Apex Tool Group, LLC
1000 Lufkin Road
Apex, NC 27539
Phone: 919-387-0099
Fax: 919-387-2614
www.apextoolgroup.com

Cleco®